



OWNER'S MANUAL

# High Definition Network Camera

Please read this manual carefully before operating your set and retain it for future reference.

**MODEL**

LNB5100 series

LNB3100 series

LND5100 series

LND3100 series

LNV5100 series

LNU5100R series

LND5100R series

LNV5100R series



MFL67860003



1302 (V1.4)

# Contents

<b>Introduction .....</b>	<b>3</b>	Day/Night settings .....	45
<b>Operation and settings .....</b>	<b>4</b>	3D-DNR setting.....	45
Before using the system .....	4	Privacy setting.....	46
Recommended PC Requirements .....	4	Special menu settings .....	47
Accessing the LG IP device.....	5	SCENE mode setting (Optional).....	49
LG Smart Web Viewer Overview .....	6	Reset setting .....	50
Configuration menu overview.....	8	<b>Reference .....</b>	<b>51</b>
Configuring the LG Network Camera Device.....	8	Troubleshooting .....	51
Accessing the Configuration menu.....	8	Open source software notice.....	54
System settings.....	9	Specifications.....	55
Audio & Video settings.....	14		
Network settings.....	24		
User settings .....	29		
Event settings.....	30		
OSD Menu Setup (Optional).....	40		
General Operation .....	42		
Exposure settings.....	42		
White Balance settings.....	44		

# Introduction

The LG Network Camera is designed to use on an Ethernet network and must be assigned an IP address to make it accessible.

This manual contains instructions on how to install and manage the LG Network Camera in your networking environment. Some knowledge of networking environments would be beneficial to the reader.

Should you require any technical assistance, please contact authorized service center.

## Features Chart

This table shows the differences between the models.

Item	LNB5100	LND5100	LNB3100	LND3100	LNV5100	LNU5100R	LND5100R	LNV5100R	
VA	Yes	Yes	No	No	Yes	Yes	Yes	Yes	
Audio	Yes	Yes	No	No	Yes	Yes	Yes	Yes	
Sensor&Relay	Yes	Yes	No	No	Yes	Yes	Yes	Yes	
OSD Control	Yes	Yes	Yes	Yes	Yes	No	No	No	
OSD	ALC2	Yes	Yes	Yes	No	Yes	Note	Note	Note
	SCENE Mode	Yes	Yes	No	No	Yes	Yes	Yes	Yes

### Note:

Model **LNU5100R**, **LND5100R** and **LNV5100R** has been added the function that limit the Max Shutter Speed same as ALC2.

# Operation and settings

## Before using the system

- Before using the LG IP device make sure the connections are correct and verify whether proper power supply is used.
- Check the connections of the LG IP device for the correct conditions.
- Check that the LG IP device is(are) connected to the network and that power is supplied.
- Once the connections are made you need to install the LG client program to the PC from which you want to access the device. The LG Smart Web Viewer program is automatically installed when you connect the LG IP device. The LVi510 and the LG Smart Web Viewer program are the network program of the LG Video Server and the LG IP cameras.
- To view streaming video in Internet Explorer, set your browser to allow ActiveX controls. If you find this message "This website wants to install the following add-on: 'IPCam\_Streamer.cab' from 'LG ELECTRONICS INC'", Click the yellow bar and install LG Smart Web Viewer Program on your computer. Please set your browser zoom level to 100%.
- The Layouts and the Live view pages may differ with different OS (Operating Systems) and Web Browsers.
- Care needs to be taken not to run any other applications when the Client Program is running as it may cause memory shortage.

## Recommended PC Requirements

The LG IP device can be used with most standard operating systems and browsers.

Items	Requirements
Operating System	Windows XP Professional, Windows VISTA, Windows 7
CPU	Intel Core2 Quard Q6700 (2.66 GHz) or above
Web Browser	Microsoft Internet Explorer above the version 7.0 and below the version 9.0.
DirectX	DirectX 9.0c (Windows XP), DirectX 11 (Windows VISTA, Windows 7) or above
Memory	2 GB or above RAM
Graphics Card	256 MB or above Video RAM
Resolution	2048 x 1536 (with 32 bit color) or higher

# Accessing the LG IP device

You can access the LG IP device by following the below steps.

## 1. Install LVi510 Program

It recommended to use LVi510 surely.

## 2. Discover the LG IP device using the IP Utility

The IP Utility can automatically discover and display LG IP devices on your network.

The IP Utility shows the MAC address, IP address, Model name and so on.

### Note:

The computer running the IP Utility must be on the same network segment (physical subnet) as the LG IP device.

- 2.1 Run the IP Utility program.
- 2.2 Click the [Search] button or select the [Search] option in the Device search menu.  
After a few seconds the found LG IP devices gets displayed in the IP Utility window.

## 3. Logging in to the LG Smart Web Viewer

- 3.1 Run the IP Utility and find the LG IP devices.
- 3.2 When the LG IP devices appear in the IP Utility window, double-click IP address or right click on the same IP address and select "Connect to Web Page" to start the LG Smart Web Viewer. When accessing the LG Smart Web Viewer, the authentication dialog appears on the screen.
- 3.3 Enter the user name and password. (Note that the

default administrator user name and password are "admin".)

### Note:


Default password must be changed for security after initial connection.

- 3.4 Click the [OK] button and then the LG Smart Web Viewer is displayed in your browser.



### Notes:






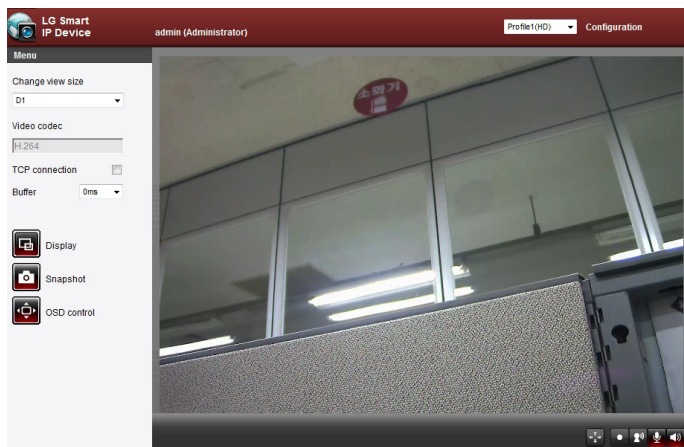- You can also access the LG Smart Web Viewer as shown below.
  - 3.1 Start your Web browser.
  - 3.2 Enter the IP address of the LG IP device in the address bar of the browse.
  - 3.3 Enter the user name and password set by the administrator.
  - 3.4 Click the [OK] button and then the LG Smart Web Viewer is displayed in your browser.
- The LG Smart Web Viewer needs more time to display it according to the network conditions.
- If the login window is not displayed, check the pop-up blocker. If you set the pop-up blocker, the login window is not displayed. You must allow the pop-ups.
- If you connect the LG Smart Web Viewer for the first time, the Security Warning window is displayed to install the LG Smart Web Viewer program. You must install the LG Smart Web Viewer program for using the LG IP device.
- If your computer or network is protected by a proxy or firewall, the proxy or firewall settings can prevent the LG Smart Web Viewer program. Change the proxy or firewall settings to activate the LG Smart Web Viewer program.





# LG Smart Web Viewer Overview



Item	Description
<p>Change view size</p> <p>D1</p>	<p>Select the video image size from the drop-down list.</p> <p>The initial view size is set to D1.</p>
<p>Video codec</p> <p>H.264</p>	<p>Displays the current video codec of the selected video stream. .</p>
<p>TCP connection</p> <p><input checked="" type="checkbox"/></p>	<p>Check this option as the network connection type (TCP or UDP). If you check it, the client connects to the server using TCP connection.</p>
<p>Buffer</p> <p>0ms</p>	<p>Select buffering time of live stream.</p>

 <p>Display</p>	<p>Click to display the check box of [Hostname], [Framerate] and [Bitrate] options. [Display] is displayed on left top of the live view window in order of selecting options.</p> <p><u>Video Analysis</u></p> <ul style="list-style-type: none"> <li>&gt; Hide: Video Analysis display function is not in use.</li> <li>&gt; SVA: Displays the Smart Video Analysis function to the live view window.</li> <li>&gt; MD: Displays the Motion Detection function to the live view window.</li> </ul> <p><b>Note:</b></p> <p>When you use the DPTZ function, all of Display function is deactivated for a while.</p>
 <p>Snapshot</p>	<p>Click to save the current image in JPEG format on your computer.</p> <ol style="list-style-type: none"> <li>1. Click the [Snapshot] button and then the Snapshot window is displayed.</li> <li>2. Click the [Save] button in the Snapshot window.</li> <li>3. Enter the file name (JPEG format) and select the folder to save it.</li> <li>4. Click the [Save] button to confirm it.</li> <li>5. Click the [Close] button in the Snapshot window to close it.</li> </ol>

 OSD control	<p>Displays the Camera OSD control window. Use these buttons to setup the Camera. This button does not appear on the screen if the login is other than the administrator. The option depends on the model.</p>
	<p>Select the video stream. From the Live view drop-down list, select the desired video image source.</p> <p><b>Note:</b> You can set the stream configurations independently. This would facilitate the user to set the live view at his comfort.</p>
	<p>Provides all the necessary tools for setting up the device to your requirements. The user will need administrator level to do this.</p> <p><b>Note:</b> If you want to exit the Configuration menu, select one of the video stream in the Live view drop-down list.</p>
	<p>Displays the current surveillance live screen. You can monitor the camera image on the live view window of the LG Smart Web Viewer.</p>
	<p>Click this button and drag the area to use PTZ function. Right-clicking the screen will bring up the previous magnification. (Color icon: On, Gray scale icon: Off.)</p>

	<ol style="list-style-type: none"> <li>1. Click this button to open the folder browse window. Click the button again in next time, video is recorded automatically without selection of folder. <b>Note:</b> If you want to change the folder, move to other pages or press the refresh button.</li> <li>2. Recording button is activated and recording will be started. <b>Note:</b> If recording exceed the time(1 hour) or size limit (1 GB), recording is stopped automatically with warning.</li> <li>3. To stop the recording, click this button during the recording.</li> </ol>
	<p>Click this button to connect or disconnect the audio communication between the LG IP device and the connected PC. The option depends on the model. (Color icon: On, Gray scale icon: Off.)</p>
	<p>Click this button to switch the microphone off and on for the computer. The option depends on the model. (Color icon: On, Gray scale icon: Off.)</p>
	<p>Click this button to switch the sound off and on, for the speaker of the computer. The option depends on the model. (Color icon: On, Gray scale icon: Off.)</p>

## Configuration menu overview

The following table shows the list of menu items.

The configuration images are different from each model.

Main Menu	Sub Menu	
System	Version	
	Date & Time	
	Maintenance	
	Storage	Option
	Text Overlay	
	Log & Report	
	Language	
Audio & Video	Camera	
	Stream	
	Audio	Option
Network	Basic	
	RTP stream	
	TCP/IP	
	DDNS	
	IP filtering	
User	SNMP	
	Basic	

Event	Event server	
	Sensor & Relay	Option
	Motion detect	
	Smart analytics	Option
	Triggered Event	
	Scheduled Event	

## Configuring the LG Network Camera Device

The features and options of the LG IP camera are configured through the Configuration menu.

Only administrator-level users have permission to access the Configuration menu.

### Accessing the Configuration menu

Click the [Configuration] button to display the LG Smart Web Viewer configuration window.

#### Warning

The Configuration setup should be made by qualified service personnel or system installers.



## System settings

### Version

Displays the current Model Name and Software version.

Menu	Version
<b>System</b>	Version list
> Version	Model Name <input type="text" value="LNUJ5100R"/>
> Date & Time	Software version <input type="text" value="1954.0.0.1212131"/>
> Maintenance	Copyright
> Storage	Copyright 2009 LG Electronics. All Rights Reserved.
> Text Overlay	
> Log & Report	
> Language	
<b>Audio &amp; Video</b>	
<b>Network</b>	
<b>User</b>	
<b>Event</b>	

### Date & Time

Menu	Date & Time
<b>System</b>	Time zone
> Version	GMT
> Date & Time	Time mode
> Maintenance	<input checked="" type="radio"/> Synchronize with NTP server <input type="text" value="pool.ntp.org"/>
> Storage	Time will be synchronized with NTP server every <input type="text" value="1 hour"/>
> Text Overlay	Click button to test this server <input type="button" value="Test"/>
> Log & Report	<input type="radio"/> Synchronize with personal computer <input type="text" value="2012-12-21 11:15:11"/>
> Language	<input type="radio"/> Synchronize manually
<b>Audio &amp; Video</b>	Date: <input type="text" value="2012-12-21"/> <input type="button" value="Calendar"/> Time: <input type="text" value="11"/> : <input type="text" value="15"/> : <input type="text" value="10"/>
<b>Network</b>	Server time
<b>User</b>	Server time <input type="text" value="2012-12-21 02:15:10"/>
<b>Event</b>	<input type="button" value="Save"/>

### Time zone

Set the time difference from GMT in the area where the IP device is installed. Select the time zone in the area where the IP device is installed from the drop down list.

### Time mode

- > Synchronize with NTP Server: Select if you want to synchronize the IP device's date and time with those of the time server called NTP (Network Time Protocol). Specify the NTP server's name. Click the [Test] button for connection test to the server.
- > Synchronize with personal computer: Select if you want to synchronize the IP device's date and time with your computer.
- > Synchronize manually: Select if you want to set the IP device's date and time manually. Select the year, month and date by clicking the calendar button. Set hour, minutes and seconds in the edit boxes.

### Notes:

- When system reboot after time setting, time of system could be delayed. If you set the time correctly, set the [Synchronize with NTP server] option.
- Refer to NTP configuration as operation system of the Recording Server when the Recording Server use recording function and NTP server.

### Server time

- > Server time: Displays the current date and time of the IP device.
- Save: Click this button to confirm the settings.

## Maintenance

Menu	Maintenance
<b>System</b>	System reboot
> Version	Click button to reboot this system. <input type="button" value="Reboot"/>
> Date & Time	
> Maintenance	<b>Backup &amp; Restore</b>
> Storage	Click button to backup current configuration. <input type="button" value="Backup"/>
> Text Overlay	Click button to restore configuration from backup file. <input type="button" value="Restore"/>
> Log & Report	<input type="text" value="찾아보기..."/> [ex: c:\backup.config]
> Language	
<b>Audio &amp; Video</b>	<b>Firmware</b>
> Network	Click button to upgrade firmware. <input type="button" value="Upgrade"/>
> User	<input type="text" value="찾아보기..."/> [ex: c:\firmware.dat]
> Event	Click button to initialize the system. <input type="button" value="Initialize"/>

### System reboot

Click the [Reboot] button to restart the IP device. It takes some minutes for the IP device to start again.

### Backup and restore

- > Backup: To take a backup all of the settings. If necessary, it make possible to return to a backup configuration.
  1. Click the [Backup] button.
  2. Click the [Save] button.
  3. Follow the instructions on the browser to specify the folder.
  4. Click the [Save] button to save the settings.
- > Restore:
  1. Click the [Browse] button.
  2. Find and open the file in which the configuration setting data is stored.
  3. Click the [Restore] button and the system settings will be restored and reboot the system.

## Note:

Backup and Restore can happen on IP device having the same version of firmware. This feature is not intended for multi-configurations or for firmware upgrades.

### Firmware


- > Upgrade
  1. Click the [Browse] button.
  2. Find and open the firmware file.
  3. Click the [Upgrade] button to update the firmware.

## Note:

When you upgrade the system, it may take some minutes to be done. Do not close the browser while the upgrade is in progress. If you close the browser, it may cause a malfunction. You should wait until the confirmation window is displayed. When the upgrade is finished, the confirmation window will be displayed.

- > Initialize: The [Initialize] button should be used with caution. Clicking it will return all of the IP device's settings to the factory default values. Except for the Network settings, PTZ Protocol and Preset settings. (The option depends on the model.)

## Storage (Optional)

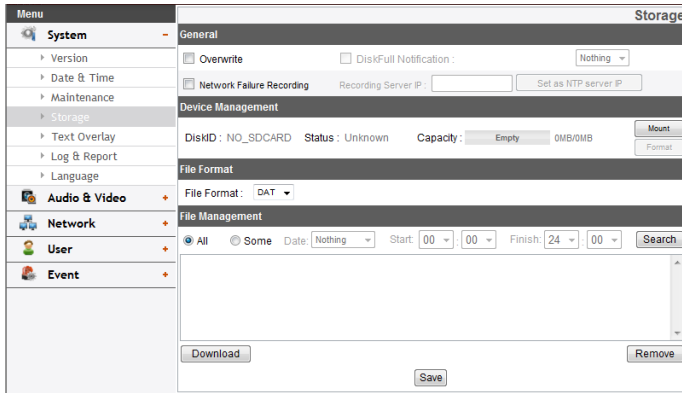

### Note:

SD Card function may not be supported in specific countries.

### General

- > Overwrite: If the micro SD card has insufficient space and this option will be activated. It will overwrite the oldest data.
- > DiskFull Notification: Sends an warning e-mail to the SMTP server when the micro SD card has fully recorded. Select the SMTP server from the drop-down list. You should register the SMTP server on the Event server setting to set this function.
- > Network Failure Recording: Select the check box to activate the micro SD card recording function. If the system does not work with recording server, the system will record the data to the micro SD Card. When the system connect to the recording server again, the recorded data of the micro SD card will transfer to the recording server automatically.
- > Recording Server IP: Enter the recording server IP.

- > Set as NTP server IP: Click this button to use the entered Recording Server IP as the NTP server IP.

### Notes:

- The recorded file name is made automatically as the "[Created date of the file]\_[GMT Recording Time]+(-) [Value of the Local Time minus GMT Time (Second)]\_[Use or not of the Daylight saving time(N/D)] [Stream index] [DeleteFlag].DAT" type.
- If the capacity of the SD card remains less than 200 MB, stop recording or overwrite new file after delete old one as [Overwrite] setting. The overwritten file can not play or may malfunction when you download.
- Recorded file on the SD card, is recording 1 frame per second when set video codec to MJPEG.

### Device Management

- > Using the micro SD card
  1. Insert the micro SD card carefully to the micro SD card slot of the camera.
  2. Click the [Mount] button. If the micro SD card is mounted to the system correctly, the [Mount] button will be changed to the [Unmount] button.
  3. Displays the information of the [Disk ID], [Status], [Capacity] options.

### Notes:

- When the micro SD card is mounted, you should format the micro SD card. After the micro SD card format is finished, you should click the [Mount] button to use it.
- When you use the micro SD card format function, it may not progress immediately. In this case, you should try it again after waiting a few minutes.

- > Remove the micro SD card
  1. Click the [Unmount] button. If the micro SD card is unmounted from the system correctly, the [Unmount] button will be changed to the [Mount] button.
  2. Remove the micro SD card from the micro SD card slot of the camera.

**Note:**

When you use the Unmount function, it may not progress immediately. Operations such as recording of the system and reading of data are required stop time before the Unmount function is activated. You should try it again after waiting a few minutes.

File Format

- > File Format: You can select the Recording File Format (AVI or DAT). Recording, Search and Download are available according to the setting.

**Notes:**

- SD Recording or FTP (Video) Sending Format are set according to the setting. When you select to AVI, [Auto Recording function] may not be activated in case of network error.
- IP Camera's time will be appeared in players based on DirectShow such as Windows Media Player and MPlayer.

File Management

Displays the recorded file of the micro SD card on the list. Click the [Search] button to display the recorded file. The list will be updated when you click the [Search] button.


- > To view the recorded file of the micro SD card
  1. Select the search option.
    - All: Search the all recorded files in the micro SD card.
    - Some: You can set the search condition by using the date and time options.
  2. Click the [Search] button and then the search result is displayed on the list.

- > Download: You can download the recorded data of the list to your PC. Select a recorded file on the list and click the [Download] button. The two confirmation window is displayed. You should download the all files that the recorded file (\*.DAT) and information file (\*.INFO). You can download as AVI file according to File format.

**Notes:**

- It is recommended to deactivate the [Overwrite] function before you download the file. When [Overwrite] function is activated, the downloading file might be overwritten, if the micro SD card has insufficient space.
  - The downloaded file can be played by using the LG File player.
- > Remove: Delete file from the SD card.
  - Save: Click this button to confirm the settings.


## Text Overlay

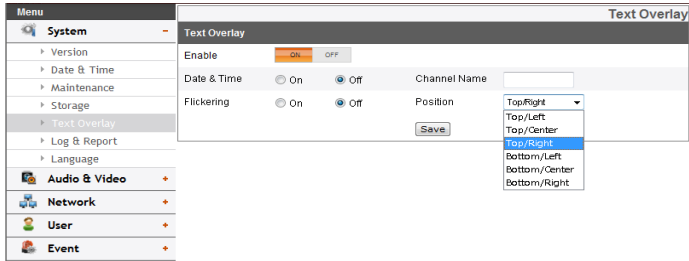

### Text Overlay

- > Enable: Set to ON or OFF. Setup menu is appeared when selects ON.
- > Date & Time : Select the ON to display time and date of Client PC.
- > Channel Name: Enter the channel name you want to use. You type the Channel Name, it will be displayed whether you select the ON or OFF.
- > Flickering: Set to On or OFF.
- > Position: You can designate the position of text from drop down list.
- Save: Click this button to confirm the settings.

## Log & Report

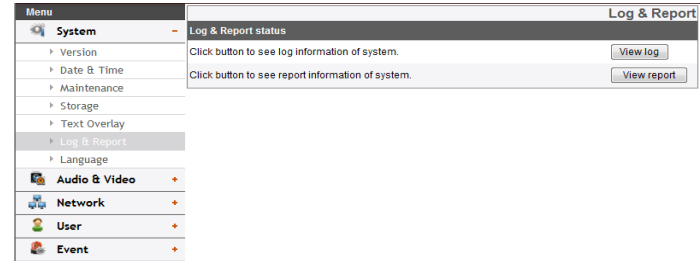

### Log & Report status

The System log provides a summary of the status of the IP device. The unit records the data of the software activity in a file.

- > View Log: Click this button to display the system log information.
  - Download: Click this button to see the log information of system.
- > View report: Click this button to display the report of the system.
  - Download: Click this button to see the report information of system.

### **Note:**

The downloaded file is a UNIX type. If you open the file in Microsoft Note pad, it will display the text as if the file contained no line breaks at all.

## Language



### Language list


Select a language for the LG Smart Web Viewer configuration menu and information display.

- Save: Click this button to confirm the settings.

## Audio & Video settings

### Camera

**Applicable Model: LNB5100 series, LNB3100 series, LND5100 series, LND3100 series, LNV5100 series**

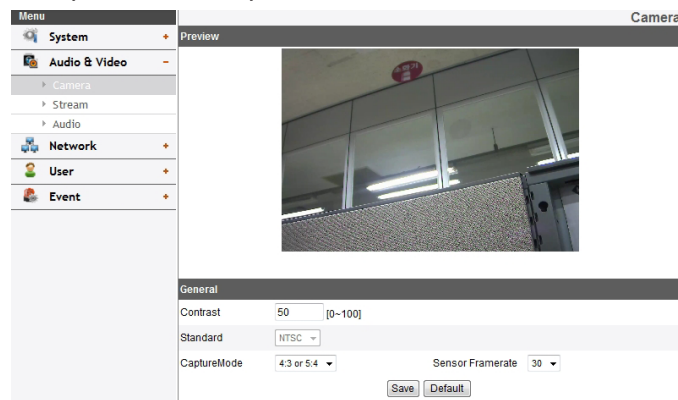

### Preview

You can preview the camera image on the preview window.

### General

- > Contrast: Edit the contrast value from 0 to 100. Selecting 100 provides the image with the highest contrast.
- > Standard: Displays the video standard of the camera.
- > CaptureMode: Select the capture mode.

#### **Note:**

If you change the CaptureMode option, the Privacy, WDR/ BLC and HSBLIC settings on the OSD menu are initialized.

- > Sensor Framerate: You can select the Sensor Framerate value

between 30 and 25.

### Notes:


- It is recommended to select Sensor Framerate value to 30 in 60 Hz region, 25 in 50 Hz region to reduce flicker.
- Maximum FPS is set 25 when you select Sensor Framerate value 25.
- Save: Click this button to confirm the settings.
- Default: Click this button to restore the IP device back to original factory settings.

### Note:

The Capture mode and Sensor Framerate are not initialized.

## Camera

**Applicable Model: LNU5100R series, LNV5100R series, LND5100R series**

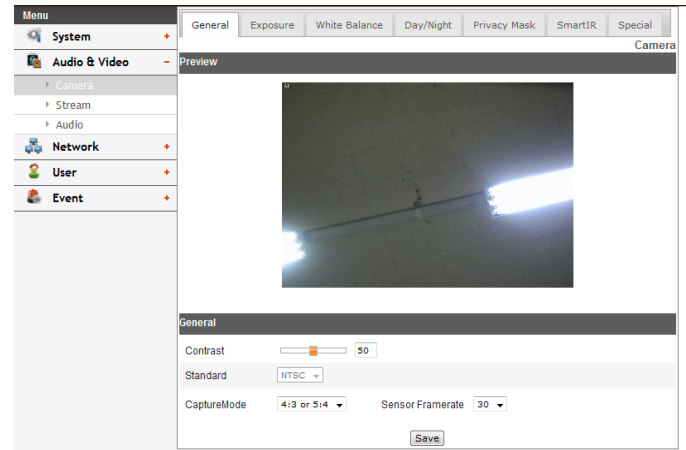

### Preview

You can preview the camera image on the preview window.

### General

- > Contrast: Edit the contrast value from 0 to 100. Selecting 100 provides the image with the highest contrast.
- > Standard: Displays the video standard of the camera.
- > CaptureMode: Select the capture mode.

### **Note:**


If you change the CaptureMode option, the Privacy, WDR/ BLC and HSBLC settings on the OSD menu are initialized.

- > Sensor Framerate: You can select the Sensor Framerate value between 30 and 25.

## Notes:

- It is recommended to select Sensor Framerate value to 30 in 60 Hz region, 25 in 50 Hz region to reduce flicker.
- Maximum FPS is set 25 when you select Sensor Framerate value 25.
- Save: Click this button to confirm the settings.

## Exposure

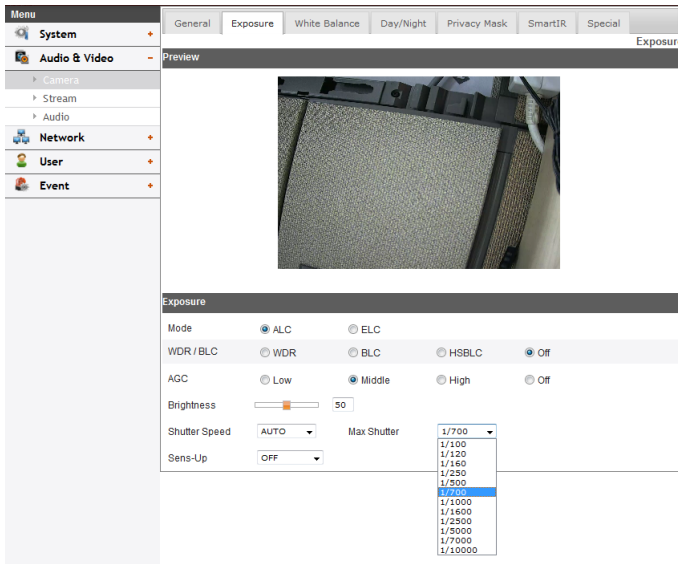

- > Mode: Select [Mode] option on the [Exposure] menu, then select a value.
- > WDR/BLC: Use WDR/BLC option to view the object clearly in backlight conditions. Select [WDR/BLC] option on the [Exposure] menu.

- WDR: WDR (Wide dynamic range) feature can be very helpful to cope with very challenging lighting conditions. It is capable of capturing both of the dark part and bright part and combining the differences into a scene to generate a highly realistic image as original scene.
- BLC: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas.
- HSBL: Use for masking brightness of the specific area to view the subject more clearly.
  - > AREA SETTING: Click the [Show] button to select area.
  - > GRAY SCALE: Select a gray scale.
  - > USER SCALE: Set a bright level.
  - > MASK: Select [ON] or [OFF]. If you set the MASK to ON, the mask function is activated only when the HSBL is activated.
- OFF: Not in use.
- > AGC: If the images are too dark, change the maximum [AGC] value to make the images bright.
- > Brightness: You can increase the brightness of the darkened video. If you set the brightness to lower value, the image gets darkened. If you set the brightness to higher value, the image gets bright.
- > Shutter Speed: Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.
  - Max Shutter: When the [Shutter Speed] is on AUTO mode, the [Max Shutter] function is activated. It limits the maximum value of the [Shutter Speed].
- > Sens-Up: If pictures are not clear due to darkness, this Sens-




Up operation would increase the sensitivity of picture.

**Note:**

If you set to one of the [Shutter Speed] options except AUTO on the [Shutter Speed] menu or [AGC] to [OFF], the [Sens-Up] setting is not available.

White Balance

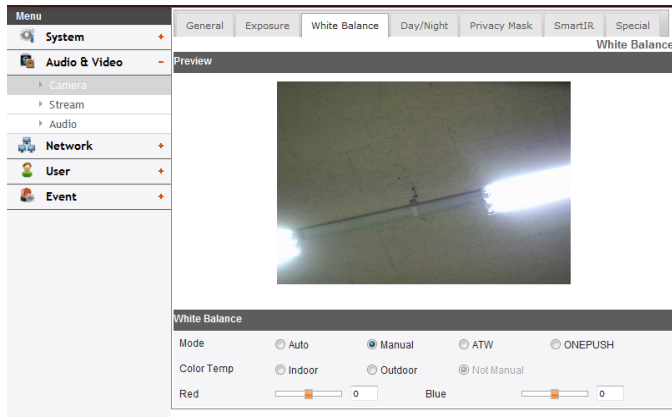


- > Mode: Select [Mode] option on the [White Balance] menu, then select the following mode.
  - Auto: You can set the white balance options automatically. When the [Mode] is set to [Auto], [Color Temp], [Red] and [Blue] option are not activated.
  - Manual: You can set the white balance options manually.
    - > Color Temp: Click to select the option.
      - Indoor: The color temperature range for the proper white balance is approximately 3 200 K.
      - Outdoor: The color temperature range for the

proper white balance is approximately 5 100 K.

- > Red: Set the desired red value.
- > Blue: Set the desired blue value.
- ATW (Auto-Tracing White Balance): In this mode, white balance has better coverage than auto. Proper white balance may not be obtained under the following conditions:
  1. When the scene contains mostly high color temperature objects, such as a blue sky or sunset.
  2. When the scene is dim.
- ONE PUSH: If you select the [ONE PUSH] mode, you will be able to set up the White Balance automatically.


Day/Night

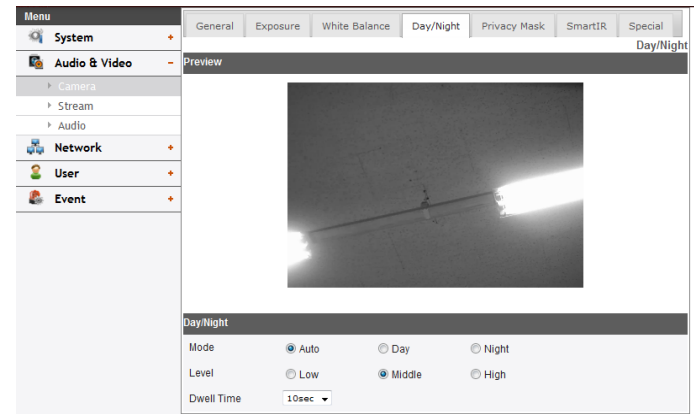

- > Mode: Select [Mode] option on the [Day/Night] menu, then select the following mode.
  - Auto: [Day/Night] mode changes automatically.
  - Day: Color mode enabled.

- Night: Black-and-white mode enabled.
- > Level: Click the option to select a level.
- > Dwell Time: Click the drop-down list to select a dwell time.

### Privacy Mask

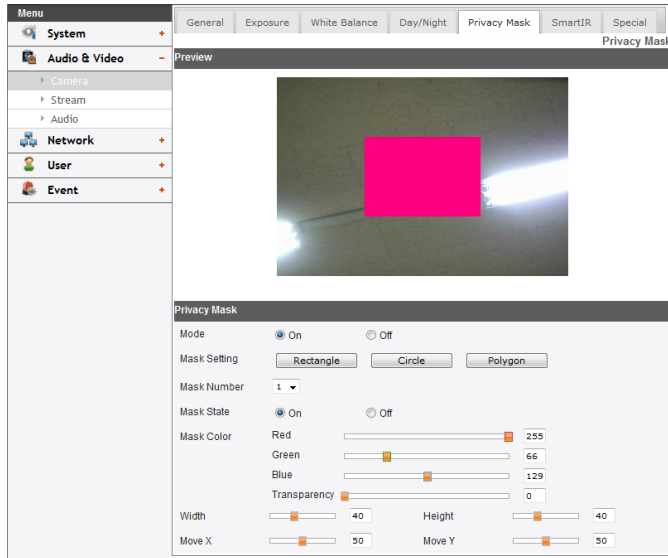









This function is aiming at the protection of personal privacy. The selected part is not displayed on the screen.

- > Mode: Select [ON] to set the Mask Setting menu.
- > Mask Setting: Select a type of Mask Setting.


#### Note:

The mask area can be set in different ways, depending on the type of Mask Setting.

- RECTANGLE :
  - Mask Number: Click the drop-down list to select one of the [Mask Number].
  - Mask State: Set to [On] or [Off] on the [Mask State] menu. When you set to [On], [Mask Color], [Width], [Height], [Move X] and [Move Y] option is activated.
  - Mask Color : You can make any color by adjusting R.G.B LEVEL and adjust the transparency of MASK.
  - Height: Increase or decrease the vertical size of the mask.
  - Width: Increase or decrease the horizontal size of the mask.
  - Move Y: Moves vertical position of the mask.
  - Move X: Moves horizontal position of the mask.
- CIRCLE :
  - Mask Number: Click the drop-down list to select one of the [Mask Number].
  - Mask State: Set to [On] or [Off] on the [Mask State] menu. When you set to [On], [Mask Color], [Width], [Height], [Move X],[Move Y] and [Radius] option is activated.
  - Mask Color : You can make any color by adjusting R.G.B LEVEL and adjust the transparency of MASK.
  - Height: Increase or decrease the vertical size of the mask.
  - Width: Increase or decrease the horizontal size of the mask.
  - Move Y: Moves vertical position of the mask.
  - Move X: Moves horizontal position of the mask.

- Radius : You can adjust the Radius size.
- POLYGON :
  - Polygon Setting : Select [Draw] and then Use the  ,  ,  ,  buttons to draw the polygon by moving each vertex. Select [Move] and then  ,  ,  ,  buttons to move the polygon.

### SmartIR

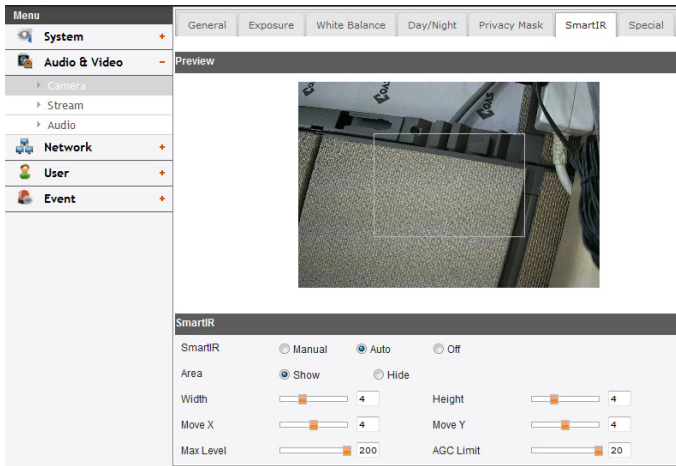


- > SmartIR: SmartIR function improve the sensitivity in the low luminance. SmartIR analyze the image of the screen, when the subject is close. Then SmartIR reduce the IR LED brightness and gain to prevent saturation of the closed subject.
  - Manual: When the [Day/Night] menu set to [Night] mode, user can adjust the brightness of the IR LED.
  - Auto: When the [Day/Night] menu set to [Night]

mode, the brightness of the IR LED will be adjusted automatically.

- OFF: When the [Day/Night] menu set to [Night] mode, IR LED will be turned off.
  - > Area: Select the [Show] to display the area setting.
  - > Width / Height: Adjust the size of the area to the left and right or up and down.
  - > Move X / Move Y: Adjust the location of the area to the left and right or up and down.
  - > Max Level: Limits the maximum brightness of IR LED. Can be set from 0 to 200.
  - > AGC Limit: When the Smart IR is working, limits the value of maximum gain.

## Special

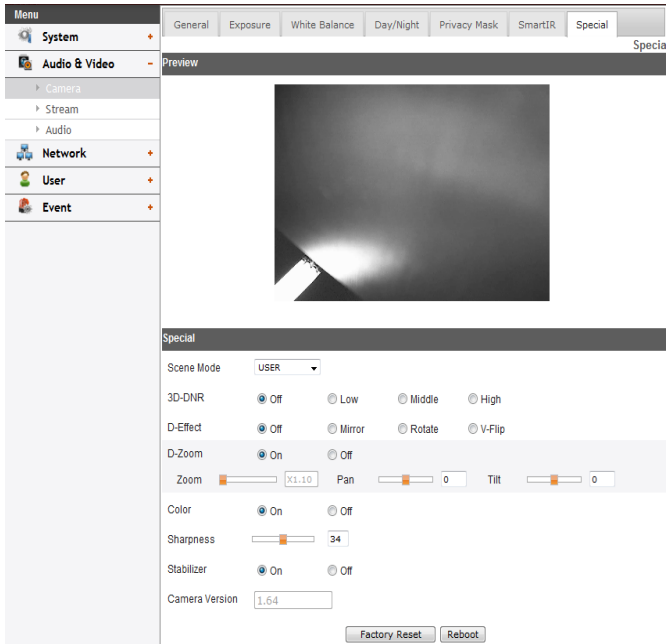

- > SCENE Mode: You can set value installed camera environment properly using this function. Several configuration value is set automatically to select option.
  - USER: If user change each value of function, save the changes.
  - STD: Settings general environment .
  - BKLT: WDR set automatically to see the subject clearly under thebacklight condition.
  - LOWLIT: Increase the Gain and set SENS-UP function to

see the subject clearly under the low light condition.

- OUTDOOR: Change to the ELC mode not to decrease definition under too light condition. And decrease Brightness value slightly prevent to video of supersaturation.
- INDOOR: Condition of light set automatically to match indoor environment.
- TRAFFIC: Set shutter speed fast to apprehend traffic information and status.

### Notes:

- Set each value of option as selected option on the [SCENE MODE] like as below table.

OPTION	STD	BKLT	LOWLIT	OUTDOOR
Max Shutter	1/700	1/700	1/700	1/700
Shutter speed	AUTO	AUTO	AUTO	AUTO
AGC	MIDDLE	MIDDLE	HIGH	MIDDLE
White Balance	ATW	ATW	ATW	ATW
WDR/BLC	Unused	Use	Unused	Unused
3D-DNR	MIDDLE	MIDDLE	MIDDLE	MIDDLE
DAY/NIGHT	AUTO	AUTO	AUTO	AUTO
ACE	Unused	Use	Unused	Unused
SHARPNESS	34	34	34	34
BRIGHTNESS	50	50	50	45
SENS-UP	OFF	OFF	AUTO x10	OFF
EXPOSURE	ALC	ALC	ALC	ALC

OPTION	INDOOR	TRAFFIC	USER
Max Shutter	MAX	-	-
Shutter speed	AUTO	Manual (1/120)	-
AGC	MIDDLE	HIGH	-
White Balance	Manual (Indoor)	ATW	-
WDR/BLC	Unused	Unused	-
3D-DNR	MIDDLE	MIDDLE	-
DAY/NIGHT	AUTO	AUTO	-
ACE	Unused	Unused	-
SHARPNESS	34	34	-
BRIGHTNESS	50	50	-
SENS-UP	OFF	OFF	-
EXPOSURE	ALC	ALC	-

- Value of [SCENE MODE] is not initialized even the reboot system. If you set to [STD], the default value of [SCENE MODE], run factory reset.
  - If you use not DC Iris lens but Manual Iris lens, must set ELC mode on the [EXPOSURE] option. In this case, value of [SCENE MODE] set to [USER] automatically.
  - When the [maximum shutter speed] value is maximum, If you set the [Capture Mode] to 30fps and 25fps the shutter speed will be 1/30sec and 1/25sec.
- > 3D-DNR: If pictures are not clear due to noise, this option would reduce the noise of picture. When you use this function, the afterimage may occur.
  - > D-Effect: You can select the digital effect.
    - MIRROR: Turn on the mirror effect.
    - ROTATE: Rotate the picture. (180°)
    - V-FLIP: Flip the picture vertically.
  - OFF: Turn off the digital effect.
  - > D-ZOOM: Select [ON] to set the digital zoom level.
    - ZOOM: You can enlarge the screen.
    - PAN: You can move the screen. (left or right)
    - TILT: You can move the screen. (up or down)
  - > Color: You can switch the displayed picture to gray scale or color.
    - On: To display the picture with color. If you set [On], the [Color Level] option is activated. Adjust the [Color Level] value using by jog controller or enter the desired value.
    - Off: To display the picture with grayscale.
  - > Sharpness: The degree to which the boundary of the two portions is clearly distinguished. Adjust the value using by jog controller enter the desired value. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.
  - > Stabilizer: The image stabilizer function minimizes the appearance of shaky images caused by low-frequency vibration. This function is useful for outdoor surveillance. Select the [Stabilizer] option and set to [On] or [Off].
  - > Camera Version: Displays the software version on the monitor.
- Factory Reset: Clear certain settings and information and return to factory default settings.
  - Reboot: Reboot the camera system.

## Stream

Menu	Stream
System	Resolution
Audio & Video	HD 1280x1024 SD D1 <input type="button" value="Save"/>
Camera	Profile Profile1(HD)
Stream	Enable <input checked="" type="checkbox"/>
Audio	Video codec H.264 Resolution 1280x1024
Network	Maximum Frame rate 30 [1-30 fps] GOP size 30 [1-30]
User	Quality VBR Stream quality Medium
Event	Alias Profile1 <input type="button" value="Save"/>

### Resolution

- > HD: Displays the maximum image size of the camera.
- > SD: Select the output image size of the camera.

#### Note:

When you use the Smart Analytics function, SD resolution is changed as shown below.

Smart Analytics	D1	CIF
Off	704 x 480	352 x 240
On	640 x 384	320 x 192

### Profile

- > Enable: Click to activate the stream function.
- > Video codec: Select the video mode (Codec) from the drop-down list. The viewer can choose among MJPEG, H.264 and H.264\_HIGH.
- > Maximum frame rate: Set the frame rate of the image.
- > GOP size: It means "Group of Pictures". The higher the GOP, the better is the video quality of the camera. Edit the value of GOP from 1 to 30. This setting is valid for H.264 video format only.

- > Quality: Select the Quality.
  - VBR: The bit rate may vary depending on the complexity of the video to meet the selected quality.
  - CBR: The video quality may vary in order to preserve a constant bit rate.
- > Stream quality: If the [Quality] option set to VBR, this option is displayed. Select the stream quality from the drop down box, the camera supports five types. (Highest, High, Medium, Low and Lowest)
- > Alias: Enter the profile name you want to use.
- > Bit rate: If the [Quality] option set to CBR, this option is displayed. Edit the bit rate value from 256 kbps to 10 240 kbps.

#### Note:


If the 'Bit rate' is configured too low with high resolution, the actual frame rate will decrease because of narrow bandwidth. So you need to set or change the 'Bit rate' to high value.

- Save: Click this button to confirm the settings.

## Region Of Interest

Profile	Profile4(ROI-1) ▾		
Enable	<input checked="" type="checkbox"/>		
Video codec	H.264 ▾		
Maximum Frame rate	30 [1~30 fps]	GOP size	30 [1~30]
Quality	VBR ▾	Stream quality	Medium ▾
Alias	Profile4		

Region Of Interest

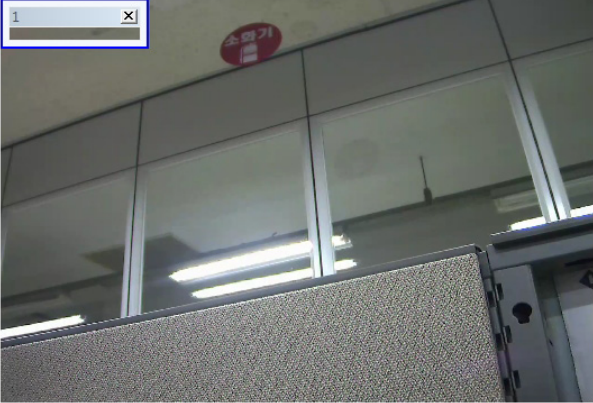

1

Save

You can set and streaming the desired area on the live view window to use ROI(Region Of Interest) function. Select Profile4(ROI-1) to Profile7(ROI-4).

> Enable

1. Click to activate the [Region Of Interest] window. You can add the 4 windows maximum for ROI function.

2. Click the edge or corner of the window box to adjust the window size.
3. Click the [Save] button to save the settings.

### Note:

ROI area can not overlap with each other.

## Audio (Optional)

Menu	Audio
System	Audio in
Audio & Video	Enable <input type="checkbox"/> Audio type G.711 PCMU
Camera	Audio out
Stream	Enable <input type="checkbox"/>
Audio	<input type="button" value="Save"/>
Network	
User	
Event	

### Audio In

- > Enable: Click the check box if you want to send the audio from the microphone input connector.

#### **Note:**

The Clients connected to the IP device remain unaffected with additional changes made in the setting.

- > Audio type: Select the codec when you send the audio from the microphone input connector.

### Audio Out

- > Enable: Click the check box to output the audio from the speaker.
- Save: Click this button to confirm the settings.

## Network settings

### Basic

Menu	Basic
System	General
Audio & Video	MAC address 3C:BD:08:0E:B0:24
Network	Port & Encryption
Basic	Web port 80 [80, 1025-65535]
RTP stream	RTSP port 554 [554, 1025-65535]
TCP/IP	Network encryption HTTP
DDNS	ARP ping
IP filtering	Enable ARP ping to configure IP address. <input checked="" type="checkbox"/>
SNMP	<input type="button" value="Save"/>
User	
Event	

### General

- > MAC address: Displays the MAC address.

### Port & Encryption

- > Web port: The default HTTP port number (80) can be changed to any port within the range 1 025 to 65 535.
- > RTSP port: Check RTSP port. The default port is 554. Other ports can be selected within the range 1 025 to 65 535.
- > Network encryption: Select the HTTP or HTTPS option for security.

#### **Note:**

The RTSP port number should not be same with the web port number.

### ARP Ping

- > Enable ARP Ping to configure IP address: Check to enable ARP ping.
- Save: Click this button to confirm the settings.



## RTP stream

RTP (Real-time Transport Protocol) is an internet protocol that allows programs to manage the real-time transmission of multimedia data, via unicast or multicast.

Menu	RTP stream
System	Profile Profile1(HD)
Audio & Video	<input checked="" type="radio"/> RTP unicast
Network	<input type="radio"/> RTP multicast
Basic	IPv4 address 239.255.214.42 [224.0.0.0 ~ 239.255.255.255]
RTP stream	Base RTP port 10000 [10000 ~ 65530, EVEN]
TCP/IP	TTL 7 [1 ~ 255]
DDNS	
IP filtering	
SNMP	
User	Save
Event	

### Profile

- > RTP unicast: When enabled the transmission of the data to the specified equipment happens on a network specifying a single address.
- > RTP multicast: When enabled it reduces the transmission load on the camera by making the computer of the same segment network receive the same transmission data. When multicast option is checked then select Video Port number, Audio Port number and Data port number.
  - IPv4 address: Set the IP address for RTP multicast.
  - Base RTP port: Enter the port number of even number used for the multicast streaming. Each profile uses successive 6 port number which starts from [Base RTP port]. It is initially set to 10 000 and you can edit this between 10 000 and 65 530.

### Note:

Each profile using multicast needs its own multicast IP address and port numbers to avoid address conflict. When more than 2 profiles use same multicast IP address, each [Base RTP port] number should be distinguished from the other port number more than 6 at least.

### TTL

- > TTL: This option indicates the Time-To-Live of multicast packets. The default setting is 7, and the allowed TTL range is from 1 to 255.
- Save: Click this button to confirm the settings.

## TCP/IP

Menu	TCP/IP
System	IPv4 address status
Audio & Video	<input checked="" type="radio"/> Automatically set with DHCP
Network	Notify to SMTP server, if IP address is changed. <input type="text" value="Nothing"/>
	<input type="radio"/> Statically set
	IPv4 address <input type="text" value="10.20.98.235"/>
	Subnet mask <input type="text" value="255.255.254.0"/>
	Gateway <input type="text" value="10.20.98.1"/>
	DNS server status
User	Primary DNS server <input type="text" value="156.147.151.32"/>
Event	Secondary DNS server <input type="text" value="165.244.106.110"/>
	IPv6 address status
	Enable <input type="checkbox"/>
	Mode <input type="radio"/> Manual <input checked="" type="radio"/> Basic <input type="radio"/> DHCPv6
	IPv6 address <input type="text" value=""/> /64
	<input type="button" value="Save"/>

### IPv4 address status

- > Automatically set with DHCP: Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
- Notify to SMTP server, if IP address is changed: If you select this option, the user get a notification mail telling about changing of IP of the IP device.

#### Notes:

- You should register the SMTP server on the Event server setting to set this function.
- If you select [Automatically set with DHCP], the camera obtain IP address from DHCP server after IP address is set "192.168.0.16".

- > Statically set: Select this option when you set a fixed IP address, with this setting, specify the IP address, Subnet mask and default gateway manually.
  - IPv4 address: Enter an IP address.
  - Subnet mask: Enter a subnet mask address.
  - Gateway: Enter the gateway address.

### DNS server status


- > Primary DNS server: Enter the Primary domain name server that translates the host names into IP address.
- > Secondary DNS server: Enter the Secondary DNS server address that backups the Primary DNS.

### IPv6 address status

- > Enable: Click the check box if you want to use the IPv6 address.
- > Mode
  - Manual: Select this option when you set a fixed IP address manually.
  - Basic: Select this option to allow IPv6 address assignment based on the Mac address. With this setting, the IP address is assigned automatically.
  - DHCPv6: Select this option when exist a DHCPv6 server in network. If DHCPv6 server is not existed or temporary disability, it requests assignment every 3 minutes.
- > IPv6 address: You can enter the IP address when you select the Manual mode. It alarms when you enter the invalid IP address.
- Save: Click this button to confirm the settings.

## DDNS

This free service is very useful when combined with the LG DDNS Server. It allows the user to connect the IP device using the URL, rather than an IP Address. This also solves the problem of having a dynamic IP address.

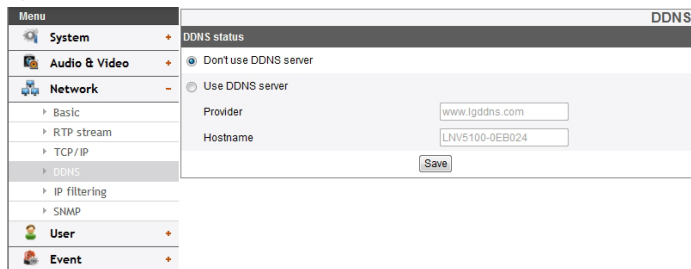


### DDNS status

- > Don't use DDNS server: Disable the DDNS function.
- > Use DDNS server: Enable the DDNS function.
  - Provider: Displays the DDNS provider.
  - Hostname: Enter the host name you want to use.
- Save: Click this button to confirm the settings.

## IP filtering

The access of the IP addresses in the list are allowed or denied according to the choice made in the drop-down list of the Basic policy option. The administrator can add up to 10 IP address entries to the list (a single entry can contain multiple IP addresses). The users from these IP addresses need to be specified in the user list with the appropriate access rights. The IP list is to control the access permission of clients by checking the client IP address.

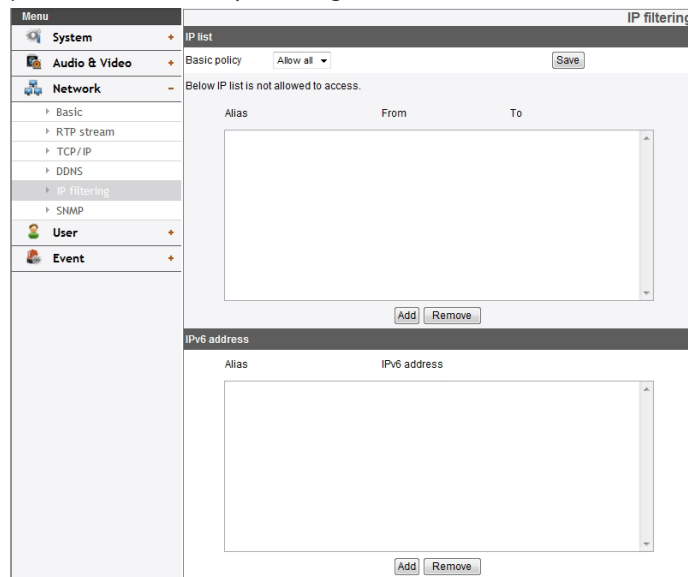

### IP list

- > Basic policy: Select the basic policy type.
  - Allow all: Allow all the IP address basically, but the IP addresses in the list are denied.

- Deny all: Deny all the IP address basically, but the IP addresses in the list are allowed. It needs at least one IP address to activate this function.
- Save: Click this button to confirm the settings.
- Add: Click this button to add the IP address.
  1. Click the [Add] button.
  2. Set the IP options.
    - Alias: Enter the alias.
    - From: Enter the start IP address for the IP filtering.
    - To: Enter the end IP address for the IP filtering.

**Note:**

If you want to deny or to allow a range of IP addresses, enter the start IP address to “From” and the end IP address to “To”. You can also add an IP address by entering the same IP address to “From” and “To”.

3. Click the [Save] button.
  4. Repeat the steps 1 to 3 to add additional IP address.
- Remove: Click this button to delete the IP address.
    1. Select the alias from the list.
    2. Click the [Remove] button. The IP address will be deleted.


IPv6 address

- Add: Click this button to add the IP address.
  1. Click the [Add] button.
  2. Set the IP address option.
    - Alias: Enter the alias.
    - IPv6 address: Enter the IP address for IP filtering.
  3. Click the [Save] button.
  4. Repeat the steps 1 to 3 to add additional IPv6 address.

- Remove: Click this button to delete the IPv6 address.
  1. Select the alias from the list.
  2. Click the [Remove] button. The IPv6 address will be deleted.

**SNMP**

The Simple Network Management Protocol (SNMP) is an application protocol to exchange the management information of network devices.

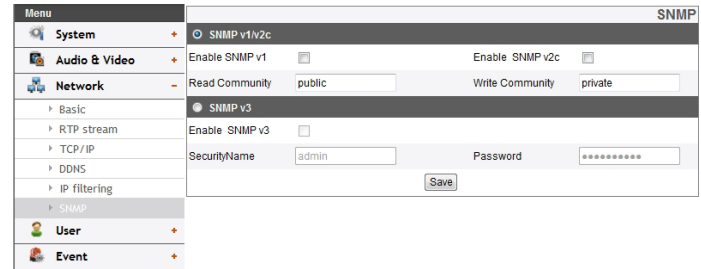

SNMP v1/v2c

- > Enable SNMP v1/v2c: Selects when SNMP is allowed access to this device.
- > Read Community: Specifies the SNMP management community in which you want to read this system.
- > Write Community: Specifies the SNMP management community in which you want to write this system.


SNMP v3

- > Enable SNMP v3: Selects when SNMP v3 is allowed access to this device. It supports authentication and encryption.
- > SecurityName: Type the security name for the SNMP.
- > Password: Type the password for the SNMP.

## User settings

### Basic

The IP device is shipped with the login rights of administrator only. If others need to access the IP device excluding the configuration a login with viewer rights need to be created. A maximum of 50 users can be created.

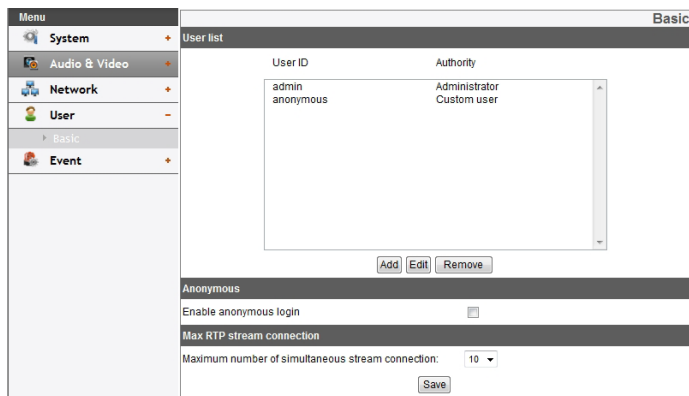

### User list

#### > Add the User

You can register a new user with various access rights.

1. Click the [Add] button. User setting dialog is displayed.
2. Enter the new User ID and Password. (Should have a minimum of 4 characters and preferably a combination of alphanumeric.)
3. To confirm the password, retype the password that you typed in the Password box.
4. Select the authority from the drop down list to provide

the access rights to each user and then click the [Save] to confirm your selection.

- Administrator: Allows you to operate setup menus and to view live images.
- Power user: Use of the limited functions of the system. (The Configuration menu is not allowed.) A power user can use the Live View, OSD control and audio functions.
- Normal user: Provides the lowest level of access, Allows to view live images only.
- Custom user: The user can login and view the live stream image only when the "Enable anonymous login" option is checked to enable it.

#### **Note:**

Remember the password.

#### > Edit the registered user

You can change the password or authority.

1. Choose the user ID and then click the [Edit] button.
2. Change the Password or Authority, then click the [Save] button to confirm your selection.

#### > Delete the registered user

1. Choose the user ID you want to delete.
2. Click the [Remove] button.

#### **Note:**

The default administrator user ID 'admin' and 'anonymous' are permanent and cannot be deleted.

## Anonymous

- > Enable anonymous login  
Check the box to enable anonymous user login - allows the user access for only viewing the live stream image.

## Maximum RTP stream connection

- > Maximum number of simultaneous stream connection:  
Set this number to limit the number of simultaneous stream connections.  
The connections depend on the stream configuration as shown in the following Maximum RTP stream connection by stream configuration.

Video Codec	Resolution	Frame Rate	Maximum RTP stream
H.264	1280x1024	30	Up to 10
MJPEG	1280x1024	20	Up to 7


### **Notes:**

- Preview window of the IP device setting and preset setting are affected by this setting.
- The video streaming may appear poor at times, this may be because of the network traffic, too many devices connected to the switch or hub, enabling motion detection to each of the video streams and because of other programs running on your computer.
- Save: Click this button to confirm the settings.

## Event settings

### Event Server

Event Servers are used to receive the recorded video clip and/or notification messages.

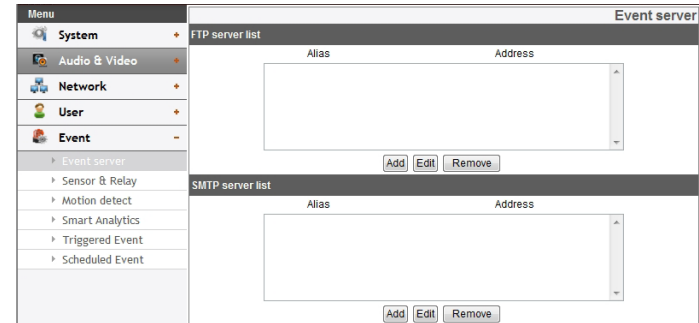

### FTP server list

Image files can be transferred to the FTP server within the scheduled time. Image file that has been recorded linked to an external event is sent to the FTP server periodically.

- > To add the FTP server
  1. Click the [Add] button. FTP server setting window is displayed.
  2. Set the FTP server options.
    - Alias: Type the FTP Server name to upload the image files.
    - Address: Enter the FTP server's IP address.
    - Port: Enter the port number. The default FTP port is 21.
    - User ID: Type the user name for the Folder shared in

- the FTP server.
- Password: Type the password for the folder shared in the FTP Server.
- Folder: Type the path with the folder that is shared in the FTP server.
- Test: Select [Test] to test the FTP server.
- 3. Click the [Save] button to confirm the settings.
- > To edit the FTP server
  1. Choose the FTP server in the FTP server list.
  2. Click the [Edit] button.  
You can check or edit the FTP server options.
- > To delete the FTP server
  1. Choose the FTP server in the FTP server list.
  2. Click the [Remove] button. This would remove the FTP server from the list.

#### SMTP server list

By selecting the e-mail option, a still image of the event is captured and an e-mail with the attached image file is sent to the specified mail address.

- > To add the SMTP server
  1. Click the [Add] button. SMTP server setting window is displayed.
  2. Set the SMTP server options.
    - Alias: Enter the SMTP server name.
    - User ID: Enter the user ID of the SMTP server. This would be the one who owns the mail account.
    - Password: Enter the password of the SMTP server.
    - Address: Enter the SMTP server address.

- Port: Enter the port number. The default port is 25.
- Enable SSL: Check when use the SSL (Secure Socket Layer) protocol. SSL protocol is cryptographic protocols that provide secure communication on a network.
- Receiving address: Type the recipients e-mail address. You can specify only one recipient e-mail address.
- Administrator address: Type the e-mail address of the administrator.
- Subject: Enter the subject/title of the e-mail.
- Message: This message can describe the information of the acquired IP address, etc.
- Test: Select [Test] to test the SMTP server.
- 3. Click the [Save] button to confirm the settings.
- > To edit the SMTP server
  1. Choose the SMTP server in the SMTP server list.
  2. Click the [Edit] button.  
You can check or edit the SMTP server options.
- > To delete the SMTP server
  1. Choose the SMTP server in the SMTP server list.
  2. Click the [Remove] button.

## Sensor & Relay (Optional)

Menu	Sensor & Relay			
System	Sensor			
Audio & Video	Enable	Alias	Type	
Network	<input checked="" type="checkbox"/>	Sensor-0	Normal open	
User	Relay			
Event	Control duration	Alias	Type	Control relay
Event server	[1-86400](24hour,second)			
Sensor & Relay	5	Relay-0	Normal open	<input type="button" value="Run"/> <input type="button" value="Stop"/>
Motion detect	<input type="button" value="Save"/>			
Smart Analytics				
Triggered Event				
Scheduled Event				


### Sensor

- > Enable: Marks up when you want to activate the sensor.
- > Alias: Displays the sensor name.
- > Type: Select the sensor type.

### Relay

- > Control duration: Enter the relay time.
- > Alias: Displays the relay name.
- > Type: Select the relay type.
- > Control relay
  - Run: Click to activate the relay.
  - Stop: Click to stop the relay.
- Save: Click this button to confirm the settings.

## Motion detect

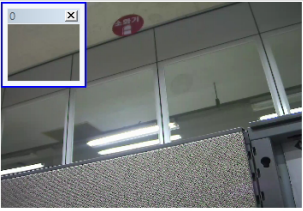Menu	Motion detect
System	Preview
Audio & Video	
Network	
User	
Event	
Event server	
Sensor & Relay	
Motion detect	
Smart Analytics	
Triggered Event	
Scheduled Event	
General	
	0
	Sensitivity [0-100]
	50
	<input type="button" value="Add"/> <input type="button" value="Save"/>
	Motion detect is available for H.264 codec.

### Preview

You can preview the motion detection window on the preview window.

### General

- > Sensitivity: Enter the sensitivity to detect an object in motion.
- > Save: Click this button to confirm the settings.

### **Note:**

Motion detect function may not normal operate as installation environment.



### How to set the motion detect window

1. Click the [Add] button. The motion detect window is displayed. You can add the five windows maximum for motion detection area.
2. Set the [Sensitivity] option.
3. Click the edge or corner of the window box to adjust the window size for motion detection.
4. Click the [Save] button to save the settings.

#### **Notes:**

- You can reset the window size. Click one of the window edge or corner and drag & drop to reset the motion detection area.
- Motion Detection can be activated when at least one of channels(HD/SD) is enabled, Video codec is set to H.264 and GOP size is more than 2.


### **Smart Analytics (Optional)**

#### **Notes:**

- The [Smart Analytics] option is ancillary function and performance is depends on installation environment or configuration.
- SD resolution is changed when you use the Smart Analytics function.

#### Smart Analytics Monitoring

- > Enable : Set to ON or OFF. Setup menu is appeared when selects ON.

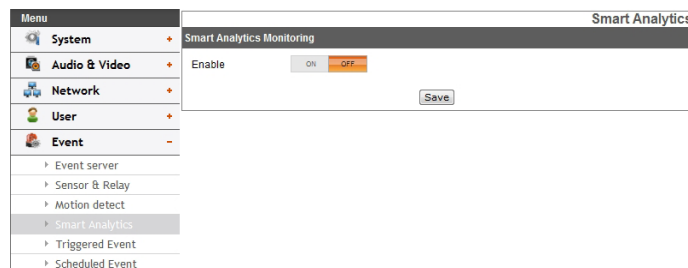

#### Event

Select the Event. (Intelligent Motion Detection, Streaming Metadata, Trip Zone, Object Counting) If you choose option, selected option is activated.

#### Preview


You can preview the camera image on the preview window.

#### **Notes:**

- Double click the preview screen to maximize full screen.
- To return to previous screen to double click full screen.

## Intelligent Motion Detection

Detect the motion of object where you set the zone.

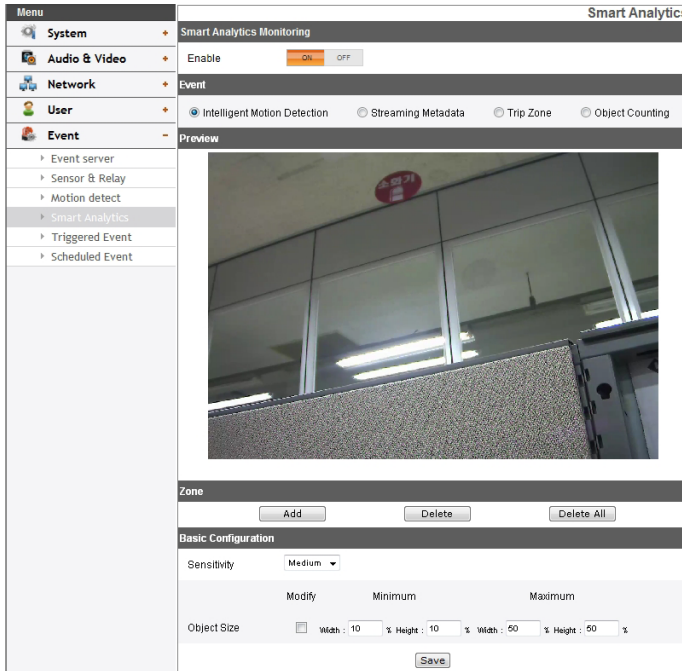

> Zone: Set the zone.

- Add

1. Click the [Add] button. When you click on the preview screen, yellow cross point is displayed.
2. Click again to make another point. The point is connected as sky blue line from previous point.

3. To complete the zone, move the mouse cursor from the selected points and click the mouse right button.

### Notes:

- When you select all of point, you can set up to 15 points and area is set automatically.
- You can cancel the point by click the mouse right button near the other point.
- If the path is intersected each other, area setting can not complete.
- Up to 4 Zone is available to set.

- Delete: Delete the selected zone.
- Delete All: Delete all of the motion area.

> Basic Configuration

- Sensitivity: Select the sensitivity from drop-down list to detect an object in motion.
- Object Size


1. Click the check box of the [Modify] option.
2. The rectangular zone of the maximum and the minimum object size are displayed.
3. Drag the point of the rectangular zone to adjust the size.

### Notes:

- When you click [Modify], value of maximum and minimum object size is initialized.
  - Width and Height of zone are displayed as percentage of the screen automatically.
  - Maximum value is more than minimum value.
- Save: Click this button to confirm the settings.

## Streaming Metadata

Send the VA Metadata where detected zone of the user's setting for use from the Client. The camera do not conduct the VA detection.

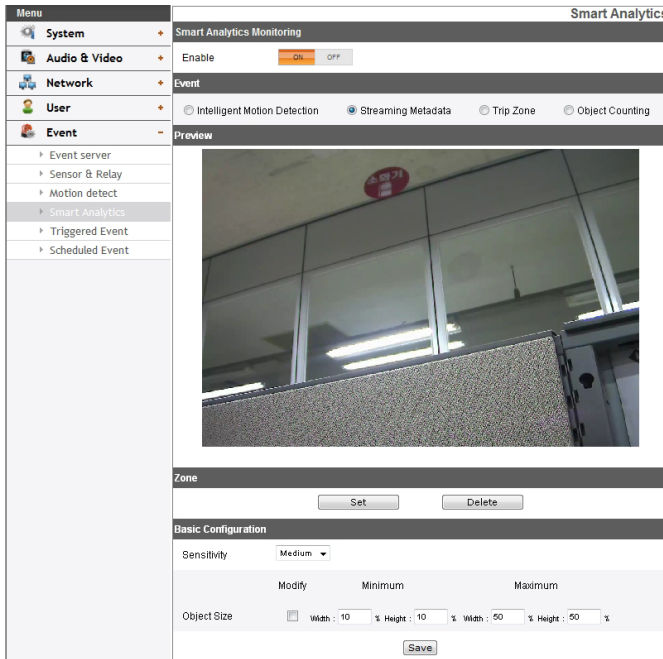

> Zone: Set the zone.

- Set

1. Click the [Set] button. When you click on the preview screen, yellow cross point is displayed.
2. Click again to make another point. The point is connected as sky blue line from previous point.

3. To complete the zone, move the mouse cursor from the selected points and click the mouse right button.

### Notes:

- When you select all of point, you can set up to 15 points and area is set automatically.
- You can cancel the point by click the mouse right button near the other point.
- If the path is intersected each other, area setting can not complete.

- Delete: Delete the zone.

> Basic Configuration

- Sensitivity: Select the sensitivity from drop-down list to detect an object in motion.

- Object Size

1. Click the check box of the [Modify] option.

2. The rectangular zone of the maximum and the minimum object size are displayed.

3. Drag the point of the rectangular zone to adjust the size.

### Notes:

- When you click [Modify], value of maximum and minimum object size is initialized.

- Width and Height of zone are displayed as percentage of the screen automatically.

- Save: Click this button to confirm the settings.

## Trip Zone

Detect the direction of object by dividing two of zone.

The screenshot shows the 'Smart Analytics Monitoring' interface. On the left is a 'Menu' with categories like System, Audio & Video, Network, User, and Event. The main area is titled 'Smart Analytics Monitoring' and has an 'Enable' toggle. Below that is the 'Event' section with radio buttons for 'Intelligent Motion Detection', 'Streaming Metadata', 'Trip Zone' (selected), and 'Object Counting'. A 'Preview' window shows a camera view of a hallway with a yellow crosshair. Below the preview is the 'Zone' configuration panel, which includes 'Split' buttons (Set 1, Set 2, Delete All), 'Directionality' options (Bi-Directional, 1 >> 2, 2 >> 1), and a 'Basic Configuration' section with a 'Sensitivity' dropdown (set to Medium) and 'Object Size' settings (Modify, Minimum, Maximum) with input fields for Width and Height percentages.

> Zone: Set the zone.

- Split:

1. Click the [Set1] button. When you click on the preview screen, yellow cross point is displayed.

2. Click again to make another point and the point is connected as sky blue line from previous point.
3. Click the mouse right button to complete the zone.

### Notes:

- You can cancel the point by click the mouse right button near the other point.
- If the path is intersected each other, area setting can not complete.

4. Click [Set2] and select side of the previous zone.
5. Repeat the steps 1 to 3 to add other positions.
6. Click [Delete All] to clear all of the area.

- Directionality: Select the movement direction of object.

### Notes:

- When you select all of point, you can set up to 15 points and area is set automatically.
- You can cancel the point by click the mouse right button near the other point.
- If the path is intersected each other, area setting can not complete.

> Basic Configuration

- Sensitivity: Select the sensitivity from drop-down list to detect an object in motion.
- Object Size
  1. Click the check box of the [Modify] option.
  2. The rectangular zone of the maximum and the minimum object size are displayed.
  3. Drag the point of the rectangular zone to adjust the size.

### Notes:

- When you click [Modify], value of maximum and minimum object size is initialized.
- Width and Height of zone are displayed as percentage of the screen automatically.
- Save: Click this button to confirm the settings.

### Object Counting

Detect the direction of object by dividing two of zone. Detect zone is divided automatically as vertically or horizontally. The number of detection is displayed on center bottom of the preview screen.

The screenshot displays the 'Smart Analytics Monitoring' interface. On the left is a 'Menu' sidebar with categories: System, Audio & Video, Network, User, and Event. The 'Event' category is expanded to show 'Event server', 'Sensor & Relay', 'Motion detect', 'Smart Analytics', 'Triggered Event', and 'Scheduled Event'. The main panel is titled 'Smart Analytics' and includes an 'Enable' toggle (ON/OFF), an 'Event' section with radio buttons for 'Intelligent Motion Detection', 'Streaming Metadata', 'Trip Zone', and 'Object Counting' (selected), and a 'Preview' window. The preview shows a video feed of a hallway with a vertical split zone: 'Zone 1' (left, yellow) and 'Zone 2' (right, cyan). Below the preview are settings for 'Zone' (Split: Left-Right selected, Top-Bottom unselected; Directionality: Bi-Directional selected, 1 >> 2 unselected, 2 >> 1 unselected) and 'Basic Configuration' (Sensitivity: Medium, Modify: Minimum, Object Size: Min: 10%, Height: 10%, and a Save button).

- > Zone: Set the zone.
  - Split: Select the method of dividing the zone either vertically or horizontally.
  - Directionality: Select the movement direction of object.

> Basic Configuration

- Sensitivity: Select the sensitivity from drop-down list to detect an object in motion.
- Object Size
  1. Click the check box of the [Modify] option.
  2. The rectangular zone of the minimum object size is displayed.
  3. Drag the point of the rectangular zone to adjust the size.

**Notes:**

- When you click [Modify], value of minimum object size is initialized.
- Width and Height of zone are displayed as percentage of the screen automatically.
- Save: Click this button to confirm the settings.

**Triggered Event**

When an event (VA/ Motion detect/ Sensor Event) occurs, this unit records the live images and routes as configured.

Menu	Triggered Event					
System	Trigger	Relay	FTP(VIDEO)	SMTP	SDCard Recording	FTP(JPEG)
Audio & Video	<input type="radio"/> Sensor-0	Relay-0				
Network	<input type="radio"/> MotionDetect-0					
User	<input type="radio"/> IMotionDetect					
Event	<input type="radio"/> TripZone					
	<input type="radio"/> ObjectCounting					
<input type="button" value="Edit"/>						

Event schedule list

> To edit the Event Schedule

1. Select the Trigger event and click the [Edit] button.

Event schedule window is displayed.

2. Set the options.

- Trigger: Display the selected trigger event and the current state of trigger. Current state of trigger is Displayed to On or Off.
- Time: Sets the weekday, Start, Finish, Pre alarm, Post alarm and Ignore interval time options.
- Action: Selects the options. This occurs when the event runs.
  - FTP server/SMTP server: Uploading of images to an FTP server, or e-mail notification.
  - Control relay(Optional): The relay is activated or deactivated.
  - SDCard recording: Record on the SD card when the event runs.
  - FTP server(JPEG): Sends the JPEG Image to the FTP server. Image file and suffix setting is available. You can select Date/Time or Sequence of Suffix.
- Stream: Selects the stream of the connected camera.
- Programmable Alarm (Optional): When the sensor event is activated, the camera will start the recording with the setting value of these options. Using this function, you can get high quality recorded image.
  1. Click the check box if you want to activate this function.
  2. Sets the options.

3. Click the [Save] button to confirm the settings.

**Notes:**

- You should register the SMTP and FTP server on the

Event server setting to set this function.

- Recording of event(VA/Motion detect/Sensor event) runs every 5 minutes split file.
- Used stream is profile of Master or HD resolution in case of FTP(JPEG) transmission.

## Scheduled Event

The screenshot shows the 'Scheduled Event' configuration page. On the left is a 'Menu' sidebar with categories: System, Audio & Video, Network, User, and Event. The 'Event' category is expanded to show sub-items: Event server, Sensor & Relay, Motion detect, Smart Analytics, Triggered Event, and Scheduled Event. The main content area is titled 'Scheduled Event' and has a tabbed interface. The 'Activation Time' tab is active, showing two radio buttons: 'Always' (selected) and 'Only scheduled time'. Below the radio buttons is a 7x24 grid for scheduling by day (Sun-Sat) and hour (00-23). The 'Action' section below has a checkbox for 'SDCard recording' with a dropdown set to 'Profile(HD)'. The 'FTP server(JPEG)' checkbox is checked, with a dropdown set to 'test' and an 'Always' checkbox also checked. Below this, 'Send Image per' is set to '5 seconds' with a dropdown for '[second-]'. There are fields for 'Base File Name' (set to 'BaseFileName.jpg') and 'Suffix' (set to 'DateTime'). A 'Save' button is at the bottom.

## Notes:

- You can select through drag of Activation Time table that is possible to select according to weekday and time.
- Used stream is profile of Master or HD resolution in case of FTP(JPEG) transmission. If always checkbox next to FTP(JPEG) is checked, FTP(JPEG) is always enable regardless of the activation time.
- Save: Click this button to confirm the settings.

### Activation Time

- > Always : You can use always by using the FTP server regardless of activation time.
- > Only scheduled time: Continuously record according to the set time and the selected weekday.

### Action

Set the below option.

- > SD Card recording : Record to SD Card when event occurs. Selects the camera stream for SD card recording.
- > FTP server(JPEG) : Upload the image or send the e-mail to the FTP server. Send Image per, Base File Name and Suffix setting are available.

## OSD Menu Setup (Optional)

The following table shows the list of menu items and options.

Main Menu	Sub Menu	Contents		
EXPOSURE	ELC/ALC, ALC2 or ELC (LND3100 only)	WDR/BLC	OFF/WDR/BLC/HSBLC	
		BRIGHTNESS	0 to 100	
		AGC	OFF/LOW/MIDDLE/HIGH	
		SHUTTER	ELC/ALC: x60,...,x2, OFF, A.FLK, 1/100,...,1/10 000 ALC2: 1/100,..., 1/10 000	
		SENS-UP	OFF	
			AUTO	
EXIT	RET/TOP/END			
WHITE BAL	ATW	-		
	AUTO	-		
	AWC → PUSH	-		
	MANUAL	COLOR TEMP	INDOOR, OUTDOOR	
		RED	-100 to 100	
		BLUE	-100 to 100	
		EXIT	RET/TOP/END	
DAY/NIGHT	AUTO	LEVEL	LOW/ MIDDLE/ HIGH	
		DWELL TIME	5, 10, 15s	
		EXIT	RET/TOP/END	
	DAY	-		
	NIGHT	-		


3D-DNR	OFF	-			
	LOW	-			
	MIDDLE	-			
	HIGH	-			
PRIVACY	OFF	-			
	ON	COLOR	RED	0 to 255	
			GREEN	0 to 255	
			BLUE	0 to 255	
			EXIT	RET/TOP/ END	
		TRANSPARENCY	0 to 16		
		RECTANGLE	MASK NUMBER	AREA1 to AREA8	
			RECT. DISPLAY	ON/OFF	
			HEIGHT	4 to 100	
			WIDTH	4 to 100	
			MOVE Y	2 to 98	
			MOVE X	2 to 98	
		EXIT	RET/TOP/ END		












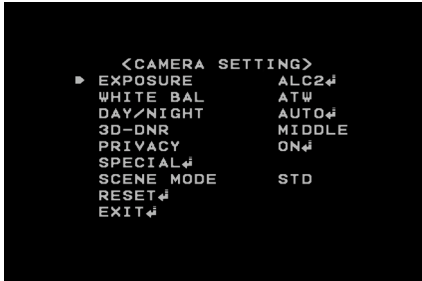




PRIVACY	ON	CIRCLE	MASK NUMBER	AREA1 to AREA2
			CIR. DISPLAY	ON/OFF
			HEIGHT	1 to 15
			WIDTH	1 to 15
			MOVE Y	0 to 100
			MOVE X	0 to 100
			RADIUS SIZE	0 to 100
			EXIT	RET/TOP/END
		POLYGON	MASK NUMBER	AREA1 to AREA2
			POLY. DISPLAY	ON/OFF
			POLYGON DRAW	-
			POLYGON MOVE	-
			EXIT	RET/TOP/END
		EXIT	RET/TOP/END	
		SPECIAL	D-ZOOM	OFF
ON	ZOOM			
	PAN			
	TILT			
	EXIT			
D-EFFECT	OFF/ V-FLIP/ MIRROR/ ROTATE			

	SHARPNESS	0 to 68		
	COLOR	OFF/ ON		
	PIP	OFF		
		ON	WINDOW MOVE	
			IMAGE MOVE	
			IMAGE SIZE	
	EXIT	EXIT		
	STABILIZER	OFF/ ON		
	USER TITLE	OFF/ ON		
	LANGUAGE	English (The option depends on the model.)		
	EXIT	RET/TOP/END		
	SCENE MODE (Optional)	STD	-	
		BKLT	-	
		LOWLIT	-	
		OUTDOOR	-	
INDOOR		-		
TRAFFIC		-		
USER		-		
RESET	CAMERA REBOOT	-		
	FACTORY RESET	-		
	EXIT	RET/TOP/END		
	EXIT	-	-	







## General Operation

1. Click the [OSD control] button on the LG Smart Web Viewer.
2. Click  button on the OSD control window.  
The camera setting menu appears on the live view window.




3. Use  or  button to select an option then click  button. Submenu appears.
4. Use  or  button to select a submenu option.
5. Use  or  button to select a value.
6. Select [EXIT] option then click  button to exit the setup menu. In the submenu, use  or  button to select the [EXIT] then use  or  button to select a mode and click  button to exit the setup menu.
  - RET: Return to the previous.
  - TOP: Return to the CAMERA SETTING menu screen.
  - END: Exit the setup menu.




## Notes:

-  button: Used to move upper direction on the menu screen.
-  button: Used to move lower direction on the menu screen.
-  button: Used to increase the value selected in the menu.
-  button: Used to decrease the value selected in the menu.
-  button: Executes selections and displays a submenu for an item with the  mark.
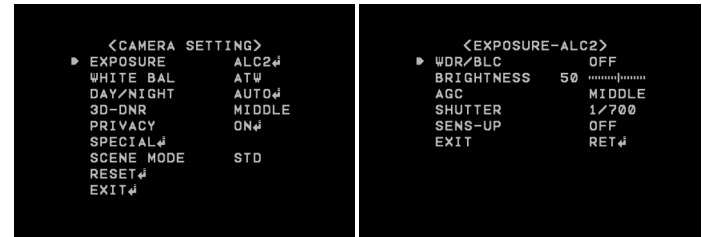
## Exposure settings



You can set the exposure options using the EXPOSURE menu.















1. Select [EXPOSURE] option on the [CAMERA SETTING] menu.
2. Use  or  button to select a mode.
3. Press  button and the EXPOSURE menu appears.

## Notes:

- ELC Mode is right for outdoor scenes.
- ALC Mode is right for indoor scenes.



## **WDR/BLC**

Use WDR/BLC option to view the object clearly in backlight conditions.

1. Select [WDR/BLC] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode then click  button.
  - WDR: WDR (Wide dynamic range) feature can be very helpful to cope with very challenging lighting conditions. It is capable of capturing both of the dark part and bright part and combining the differences into a scene to generate a highly realistic image as original scene. Set the WDR limit.
    - > ACE (Adaptive Contrast Enhancement) : This function is used when you want to display dark areas of WDR brightly.
  - BLC: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas. Set the BLC limit.
  - HSBL: Use for masking brightness of the specific area to view the subject more clearly. The HSBL mode is automatically activated only in low luminance scene.
    - > AREA SETTING: Use  or  button to select area then use  or  button to select [ON] or [OFF]. Click  button to exit the area setting menu.
    - > GRAY SCALE: Use  or  button to select a gray scale.
    - > USER SCALE: Use  or  button to select a bright level.
    - > MASK: Use  or  button to select [ON] or [OFF]. If you set the MASK to ON, the mask function is activated only when the HSBL is activated by auto mode.
  - OFF: Not in use.



## **BRIGHTNESS**

You can increase the brightness of the darkened video. If you set the brightness to lower value, the image gets darkened. If you set the brightness to higher value, the image gets bright.

1. Select [BRIGHTNESS] option on the [EXPOSURE] menu.
2. Use  or  button to set the bright level.



## **AGC (Automatic Gain Control)**

If the images are too dark, change the maximum [AGC] value to make the images brighter.

1. Select the [AGC] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode.

## **SHUTTER (Shutter Speed)**

Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.

1. Select [SHUTTER] option on the [EXPOSURE] menu.
2. Use  or  button to set shutter speed.

### **Note:**

If you set the shutter speed value in ALC2 mode, it is maximum value. When the camera is activated with ALC2 mode, the shutter speed is arrived maximum value and then the camera is change to iris control mode automatically for the camera exposure. Select ALC mode when flicker is occurred in indoor environment.

## **SENS-UP**

If pictures are not clear due to darkness, this SENS-UP operation would increase the sensitivity of picture.


1. Select [SENS-UP] option on the [EXPOSURE] menu.
2. Use **←** or **→** button to select a mode.
  - AUTO: Adjust the sensitivity of the picture automatically.
    - > SENS-UP LIMIT: Use **←** or **→** button to set the SENS-UP limit.
    - > EXIT: Select a mode and click **↵** button to exit the menu.

### **Note:**

If you set to [AGC] to [OFF], the [SENS-UP] setting is not available and [---] mark is displayed.

## **White Balance settings**


Select the method by which the camera shifts its output colors to compensate for the color of a light source.

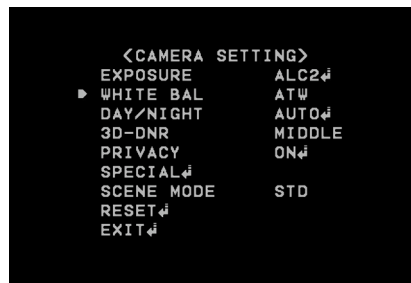

1. Select the [WHITE BALANCE] option.
2. Use **←** or **→** button to select a mode then click **↵** button.
  - ATW (Auto-Tracing White Balance): In this mode, white balance has better coverage than auto. Proper white balance may not be obtained under the following conditions:
    - > When the scene contains mostly high color temperature objects, such as a blue sky or sunset.
    - > When the scene is dim.
  - AUTO: You can set the white balance options automatically.
  - AWC **⇒** PUSH: If you select the AWC **⇒** PUSH mode, you will be able to set up the White Balance automatically using **↵** button.
  - MANUAL: You can set the white balance options manually.
    - > COLOR TEMP: Use **←** or **→** button to select a function.
      - INDOOR: It is the color temperature range for office.
      - OUTDOOR: It is the color temperature range for sunlight.

- > RED: Set the desired red value.
- > BLUE: Set the desired blue value.

## Day/Night settings

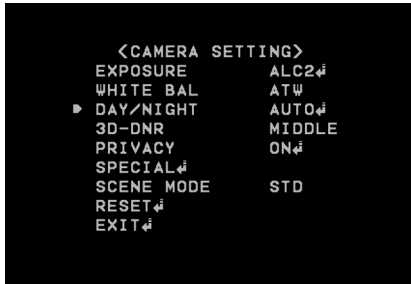


1. Select [DAY/NIGHT] option.
2. Use **←** or **→** button to select a mode for DAY/NIGHT function.
  - AUTO: DAY/NIGHT mode changes automatically.

### Note:

If you set the AGC to [OFF] on the [EXPOSURE] menu, the AUTO mode of the [DAY/NIGHT] function is not available and [---] mark is displayed.

- > LEVEL: Use **←** or **→** button to select a level.
- > DWELL TIME: Use **←** or **→** button to select a dwell time.
- DAY: Color mode enabled.
- NIGHT: Black-and-white mode enabled.

## 3D-DNR setting

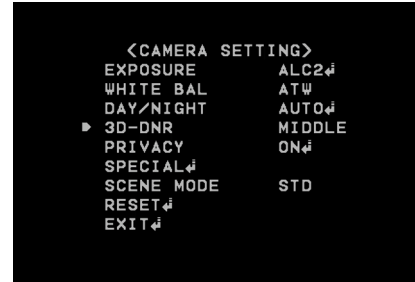

1. Select [3D-DNR] option.  
If pictures are not clear due to noise, this option would reduce the noise of picture.


2. Use **←** or **→** button to select an option.

### Notes:

- If you set the AGC to [OFF] on the [EXPOSURE] menu, the [3D-DNR] function is not available and [---] mark is displayed.
- When you use this function, the afterimage may occur.

## Privacy setting


This function is aiming at the protection of personal privacy. The selected part is not displayed on the screen.

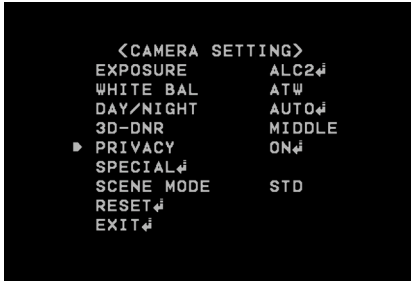

1. Select the [PRIVACY] option.
2. Use or button to select [ON] and press . The PRIVACY SETUP menu appears.
  - COLOR : You can make any color by adjusting R.G.B LEVEL.
  - TRANSPARENCY : You can adjust the transparency of MASK.
  - RECTANGLE :
    - > Use or button to select a mask on the [MASK NUMBER].
    - > Use or button to set up the [ON] or [OFF] on the RECT. DISPLAY option.
    - > Use or to select an option then use or button to adjust the option.
      - HEIGHT: Increase or decrease the vertical size of the mask.
      - WIDTH: Increase or decrease the horizontal size of the mask.

- MOVE Y: Moves vertical position of the mask.
  - MOVE X: Moves horizontal position of the mask.
- CIRCLE :
    - > Use or button to select a mask on the [MASK NUMBER].
    - > Use or button to set up the [ON] or [OFF] on the CIR. DISPLAY option.
    - > Use or to select an option then use or button to adjust the option.
      - HEIGHT: Increase or decrease the vertical size of the mask.
      - WIDTH: Increase or decrease the horizontal size of the mask.
      - MOVE Y: Moves vertical position of the mask.
      - MOVE X: Moves horizontal position of the mask.
      - RADIUS SIZE : You can adjust the RADIUS SIZE.
  - POLYGON :
    - > Use or button to select a mask on the [MASK NUMBER].
    - > Use or button to set up the [ON] or [OFF] on the POLY. DISPLAY option.
    - > Use the , , , and buttons to draw the polygon by moving each vertex on the [POLYGON DRAW]. Each movable vertex will be displayed as a black square spot each time you click the button.
    - > Use the , , , and buttons to move the polygon on the [POLYGON MOVE].

## Special menu settings

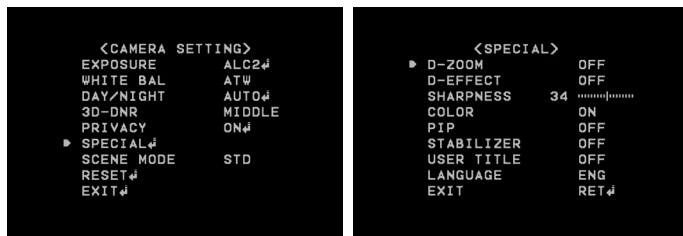

### D-ZOOM

You can select the digital zoom level.

1. Select [D-ZOOM] option on the [SPECIAL] menu.
2. Use **←** or **→** button to select [ON] then click **↔** button. When you set to ON, the displayed image can be shaking.
3. Use **↑** or **↓** button to select an option then use **←** or **→** button to select a level.
  - ZOOM: Use **←** or **→** button to enlarge the screen.
  - PAN: Use **←** or **→** button to move the screen. (left or right)
  - TILT: Use **←** or **→** button to move the screen. (up or down)

### D-EFFECT (Digital effect)

You can select the digital effect.

1. Select the [D-EFFECT] option on the [SPECIAL] menu.
2. Use **←** or **→** button to select a digital effect.
  - V-FLIP: Flip the picture vertically.
  - MIRROR: Turn on the mirror effect.
  - ROTATE: Rotate the picture. (180°)
  - OFF: Turn off the digital effect.

### SHARPNESS

The degree to which the boundary of the two portions is clearly distinguished.

1. Select the [SHARPNESS] option on the [SPECIAL] menu.
2. Use **←** or **→** button to adjust the option. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.














### COLOR

You can switch the displayed picture to gray scale or color.

1. Select the [COLOR] option on the [SPECIAL] menu.
2. Use **←** or **→** button to change a color effect.
  - ON: To display the picture with color.
  - OFF: To display the picture with gray scale.

## **PIP**

You can view an image in PIP(picture in picture) mode.

1. Select the [PIP] option on the [SPECIAL] menu.
2. Use  or  button to select [ON] then click  button. The PIP window is displayed on the live window.
  - WINDOW MOVE : The PIP window can be moved through the live image window using , ,  and  buttons.
  - IMAGE MOVE : You can view the special area image on the PIP window. Use , ,  or  button to view the live image of the special area.
  - IMAGE SIZE: Use  or  button to enlarge or reduce the size of image on the PIP window. This function is activated with digital zoom function.

## **STABILIZER**

The image stabilizer function minimizes the appearance of shaky images caused by low-frequency vibration. This function is useful for outdoor surveillance.

Select the [STABILIZER] option and set to ON or OFF.




### **Note:**

If you set the [STABILIZER] to ON, the Digital zoom is set to [x1.1] automatically.









## **USER TITLE**

You can use the camera identification to assign a number and character to the camera.

To disappear the user title, select [OFF].



1. Select the [USER TITLE] option on the [SPECIAL] screen.
2. Use  or  button to select [ON] then click  button. The USER TITLE menu appears.



3. Use , ,  or  button to select a character or number then click  button.
  - CLR: Clear all entered characters and numbers.
  - POS: Move the USER TITLE position on the screen using the arrow buttons.
  - END: Confirm your selection or exit the setting.
  -  (Blank): Insert a space at the cursor position.
  -  / : Moves cursor to left or right.

## **LANGUAGE**


Select the viewer language for the camera setup menu and OSD information display.

1. Select the [LANGUAGE] option on the [SPECIAL] screen.
2. Use  or  button to select the language.



## SCENE mode setting (Optional)

You can set value installed camera environment properly using this function. Several configuration value is set automatically to select option.

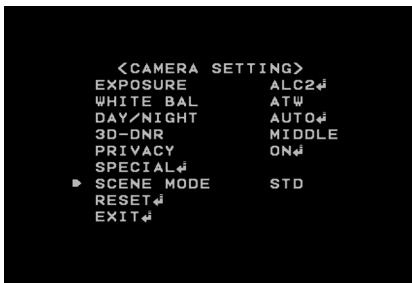

- STD: Settings general environment .
- BKLT: WDR set automatically to see the subject clearly under the backlight condition.
- LOWLIT: Increase the Gain and set SENS-UP function to see the subject clearly under the low light condition.
- OUTDOOR: Change to the ELC mode not to decrease definition under too light condition. And decrease Brightness value slightly prevent to video of supererogation.
- INDOOR: Condition of light set automatically to match indoor environment.
- TRAFFIC: Set shutter speed fast to apprehend traffic information and status.
- USER: If user change each value of function, save the changes.

## Notes:


- Set each value of option as selected option on the [SCENE MODE] like as below table.





OPTION	STD	BKLT	LOWLIT	OUTDOOR
Shutter speed	AUTO	AUTO	AUTO	AUTO
AGC	MIDDLE	MIDDLE	HIGH	MIDDLE
White Balance	ATW	ATW	ATW	ATW
WDR/BLC	OFF	WDR	OFF	OFF
3D-DNR	MIDDLE	MIDDLE	MIDDLE	MIDDLE
DAY/NIGHT	AUTO	AUTO	AUTO	AUTO
ACE	-	OFF	-	-
SHARPNESS	34	34	34	34
BRIGHTNESS	50	50	50	45
SENS-UP	OFF	OFF	AUTO x10	OFF
EXPOSURE	ALC2	ALC2	ALC	ALC2

OPTION	INDOOR	TRAFFIC	USER
Shutter speed	AUTO	Manual(1/120)	-
AGC	MIDDLE	HIGH	-
White Balance	Manual (Indoor)	ATW	-
WDR/BLC	OFF	OFF	-
3D-DNR	MIDDLE	MIDDLE	-
DAY/NIGHT	AUTO	AUTO	-
ACE	-	-	-
SHARPNESS	34	34	-
BRIGHTNESS	50	50	-
SENS-UP	OFF	OFF	-
EXPOSURE	ALC	ALC	-

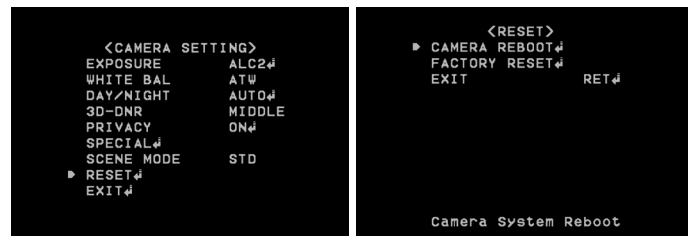- Value of [SCENE MODE] is not initialized even the reboot system. If you set to [STD], the default value of [SCENE MODE], run factory reset.
- If you use not DC Iris lens but Manual Iris lens, must set ELC mode on the [EXPOSURE] option. In this case, value of [SCENE MODE] set to [USER] automatically.

## Reset setting



1. Select the [RESET] option.
2. Click  button and the RESET menu appears.
3. Use  or  button to select option.
  - CAMERA REBOOT: Reboot the camera system.
  - FACTORY RESET: Clear certain settings and information and return to factory default settings.
4. Click  button to confirm your selection.

# Reference

---

## Troubleshooting

This section provides useful information to help you to resolve any difficulty you might have with your LG IP device. Fault symptoms, possible causes and remedial actions are provided here.

### **IP Setting problems**

- ARP/Ping: Disconnect and reconnect the power to the network camera. The device should get the IP within 2 minutes.
- Ping your camera: Open the command prompt on your computer, type ping with the IP address of the network device. The reply obtained by this command provides explanation for the cause of the problem.
  1. bytes = 32 time = 2 ms indicates that the IP address is already used and cannot reuse the same. A new IP address needs to be obtained.
  2. Destination host unreachable: indicates that the network device and your computer do not fall in the same subnet hence needs to get a new IP address. Contact the system administrator for the required help.
  3. Request timed out: Indicates that the IP is free as it is not used by anyone and the network device can obtain this.
- IP Conflicts: If the LG network device is set with a static IP address and if the DHCP option is set then there may be IP's same as the network device and other network partner. Hence set the static IP address to 0.0.0.0 to resolve this conflict.

### **Cannot access the camera from browser:**

- Reconnect the network camera with power and check the ping operation to know if the IP is used by others.
- Disable the proxy setting in the Browser if you are using a proxy server.
- Check for proper cabling and network connections, try to ping after verifying the connectivity.
- Sometimes when HTTPS is enabled, we would be checking the URL with http, in this case manually change the URL to the http/https accordingly.
- Verify the DNS and Gateway settings if the IP address is assigned statically to the network device.

### **Accessing camera external to the local network**

- Firewall Protection: Check for the internet firewall with the system administrator, either he has to do port forwarding or modify the DMZ function on the router.
- Default router needed: Check if you need configure the router settings.

### **Sporadic network performance**

- Network Switches or hubs used may be of the lower configuration and the load on this may not meet the required conditions of our network camera.
- Check for the RJ-45 cables that are used for the network connectivity.
- If POE is used check if the power is got by the network camera when connected to it.

### **Login Password lost**

- Reset the camera by pressing the Reset button for more than 3 seconds to restore default settings.
- After the factory settings login using the default user name and password.

### **Video Streaming problems**

- If the video streaming does not start on the Web browser, install the LG Web Client ActiveX program on your computer following the instructions on the Web browser.
- When Windows IE browsers are used always take care to allow pop ups, check this option before we run the web client.
- Check the quality of image by referring the video settings as described in the manual.
- Sometimes there would be intermittent or very slow video streaming, this may be because of the higher resolution and frame rate that are set for the video.
- The video streaming may appear poor at times, this may be because of the network traffic ,too many devices connected to the switch or hub, enabling motion detection to each of the video streams and because of other programs running on your computer.
- If the images appear to be blurred adjust the focus of the network camera to get a clear image.
- Video images if appear white and black adjust the settings in the OSD to get back the colorful image.
- Select the Night mode if the network camera is connected at a place where surrounding light is less or dark.

- If we obtain lower frame rate than set we need to check from the system administrator for sufficient bandwidth available or reduce the number of applications running on the client computer.
- If the client PC's are unable to access the multicast stream, check with the system administrator for the use of a valid multicast address or check if the router is supporting multicasting.
- If the images appear to have white or gray stripes on it, upgrade the Video graphics driver on the client PC to the latest version.
- Video images may be noisy if you are using the camera in a very low light environment or the bit rate/quality is set to very low values. Provide higher values for quality and support the surrounding environment with enough light.

### **Audio condition**

The client computer that is interacting with the camera needs to have a sound card that is functional to support speaker and microphone.

The sound card needs to be checked for its support for full duplex communication.

Ensure that the mute button of the client computer is not set and all the audio settings are correct.

Speaker button on the web viewer should be enabled to listen the audio from the network camera.

Ensure that the bidirectional audio button is enabled on the Web viewer and the microphone is set.

Change the input and the output gain for microphone and the speaker respectively to set correct audio level.

### **Clear browser's Cache**

- If your browser is not working correctly after upgrade firmware. Please follow the below solution.
- Solution: Deleting your browser's cache may be resolved this issue.
  1. Open Internet Options in browser Tools menu and click the [Delete Files] button in the second entry (Internet temporary files).
  2. Check the other settings that should not be changed.

### **RCA output problem**

- RCA output use to initial installation.
- Depending on the IP Camera usage scenario, RCA output video may not be smooth. It is used for initial installation only.

For all further support please contact the supplier or forums or websites.

## Open source software notice

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## Specifications

Item		LNB5100	LND5100	LNV5100
Image Device		6.08 mm (1/3 type) Progressive Scan CMOS (1.3 Mega Pixels)		
Lens Type		DC-Iris, CS Mountable (Optimization of 6.08 mm (1/3 type) Lens of 1.3 Mega Pixels or above)	2.8 mm to 10 mm F1.2	
Day/Night		ICR		
Minimum Illumination	Color	0.3 lx (F1.2, Gain : High)		
	B/W	0.005 lx (F1.2, Gain : High)		
WDR		Support		
Image Enhancement		Backlight Compensation, 2D+3D-DNR, Exposure Control, Sens Up Control, AGC, White Balance, Privacy Masking, EIS, Sharpness, Digital Zoom, Scene mode		
Resolution (Maximum)		Up to 1 280 x 1 024		
Output		RJ-45 (Network), RCA (Installation)		
Frame Rate (Maximum)		30 fps @ 1280 x 1024, 30 fps @ 720p		
Compression		H.264_HIGH, H.264, MJPEG		
Multi-Streaming		Dynamic Profile (Up to 7)		
Audio In/Out		1/1		
Audio Compression		G.711, G.726		
2-way Audio		Support		
SD Slot		micro SD		
EVENT	Alarm In/Out	1/1		
	Motion detection	Support		
	Event Notification	Relay Out, Email, FTP		
	Pre Event Buffering	Support		

VA	Intelligent Motion Detection	Support	
	Streaming Metadata	Support	
	Trip Zone	Support	
	Object Counting	Support	
Integrated Client		LVi510	
Remote S/W		LVi510, Mobile application (iPhone, Android, iPad)	
Connections		Up to 10	
Security		Password Protection, HTTPS(SSL, TLS)	
Ethernet		10/100 Ethernet	
Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP	
	IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)	
Open Protocol		ONVIF 2.2 Profile S,PSIA 1.1	
Operation Temperature/Humidity		-10 °C to 50 °C / 0 % RH to 80 % RH	
Power Source		PoE (IEEE 802.3af ), DC 12 V (±20 %)	
Power Consumption		5.9 W	
Input current		Maximum 440 mA (DC 12 V), Maximum 140 mA (PoE)	
Dimension		68.6 mm x 54.0 mm x 121.5 mm (W x H x D)	140 mm x 120 mm (Ø x H) 140 mm x 122 mm (Ø x H)
Weight		365 g	610 g 964 g



Item		LNB3100	LND3100
Image Device		6.08 mm (1/3 type) Progressive Scan CMOS (1.3 Mega Pixels)	
Lens Type		DC-Iris, CS Mountable (Optimization of 6.08 mm (1/3 type) Lens of 1.3 Mega Pixels or above)	3 mm F2.0
Day/Night		Digital	
Minimum Illumination		0.3 lx (F1.2, Gain : High)	0.7 lx (F2.0, Gain : High)
WDR		Support	
Image Enhancement		Backlight Compensation, 2D+3D-DNR, Exposure Control, Sens Up Control, AGC, White Balance, Privacy Masking, EIS, Sharpness, Digital Zoom	
Resolution (Maximum)		Up to 1 280 x 1 024	
Output		RJ-45 (Network), RCA (Installation)	
Frame Rate (Maximum)		30 fps @ 1280 x 1024, 30 fps @ 720p	
Compression		H.264_HIGH, H.264, MJPEG	
Multi-Streaming		Dynamic Profile (Up to 7)	
SD Slot		micro SD (Optional)	
EVENT	Motion detection	Support	
	Event Notification	Email, FTP	
	Pre Event Buffering	Support	
Integrated Client		LVi510	
Remote S/W		LVi510, Mobile application (iPhone, Android, iPad)	
Connections		Up to 10	
Security		Password Protection, HTTPS(SSL, TLS)	
Ethernet		10/100 Ethernet	

Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP	
	IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)	
Open Protocol		ONVIF 2.2 Profile S,PSIA 1.1	
Operation Temperature/Humidity		-10 °C to 50 °C / 0 % RH to 80 % RH	
Power Source		PoE (IEEE 802.3af ), DC 12 V (±20 %)	
Power Consumption		5.9 W	
Input current		Maximum 440 mA (DC 12 V), Maximum 140 mA (PoE)	
Dimension		68.6 mm x 54.0 mm x 121.5 mm (W x H x D)	140 mm x 110 mm (Ø x H)
Weight		357 g	506 g

Item		LNU5100R	LND5100R	LVN5100R
Image Device		6.08 mm (1/3 type) Progressive Scan CMOS (1.3 Mega Pixels)		
Lens Type		2.8 mm to 10 mm F1.2		
Day/Night		ICR		
Minimum Illumination	Color	0.3 lx (F1.2, Gain : High)		
	B/W	0 lx (LED On)		
IR Distance		30 m	20 m	
WDR		Support		
Image Enhancement		Backlight Compensation, 2D+3D-DNR, Exposure Control, Sens Up Control, AGC, White Balance, Privacy Masking, EIS, Sharpness, Digital Zoom, Scene mode		
Resolution (Maximum)		Up to 1 280 x 1 024		
Output		RJ-45 (Network), RCA (Installation)		
Frame Rate (Maximum)		30 fps @ 1280 x 1024, 30 fps @ 720p		
Compression		H.264_HIGH, H.264, MJPEG		
Multi-Streaming		Dynamic Profile (Up to 7)		
Audio In/Out		1/1		
Audio Compression		G.711, G.726		
2-way Audio		Support		
SD Slot		micro SD		
EVENT	Alarm In/Out	1/1		
	Motion detection	Support		
	Event Notification	Relay Out, Email, FTP		
	Pre Event Buffering	Support		

VA	Intelligent Motion Detection	Support		
	Streaming Metadata	Support		
	Trip Zone	Support		
	Object Counting	Support		
Integrated Client		LVi510		
Remote S/W		LVi510, Mobile application (iPhone, Android, iPad)		
Connections		Up to 10		
Protection		IP66, Vandal Proof	Not Support	IP66, Vandal Proof
Security		Password Protection, HTTPS(SSL, TLS)		
Ethernet		10/100 Ethernet		
Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP		
	IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)		
Open Protocol		ONVIF 2.2 Profile S,PSIA 1.1		
Operation Temperature/Humidity		-10 °C to 50 °C / 0 % RH to 80 % RH		
Power Source		PoE (IEEE 802.3af ), DC 12 V (±20 %), AC 24 V ( ±10%)	PoE (IEEE 802.3af ), DC 12 V (±20 %)	
Power Consumption		9.9 W	7 W	
Input current		Maximum 590 mA (AC 24 V), Maximum 690 mA (DC 12 V), Maximum 190 mA (PoE)	Maximum 590 mA (DC 12 V), Maximum 170 mA (PoE)	
Dimension		84 mm x 83.5 mm x 339 mm (W x H x D)	140 x 120 mm (Ø x H)	140 x 122 mm (Ø x H)
Weight		1.4 kg (with Sunshield 1.57 kg)	570 g	927 g

